


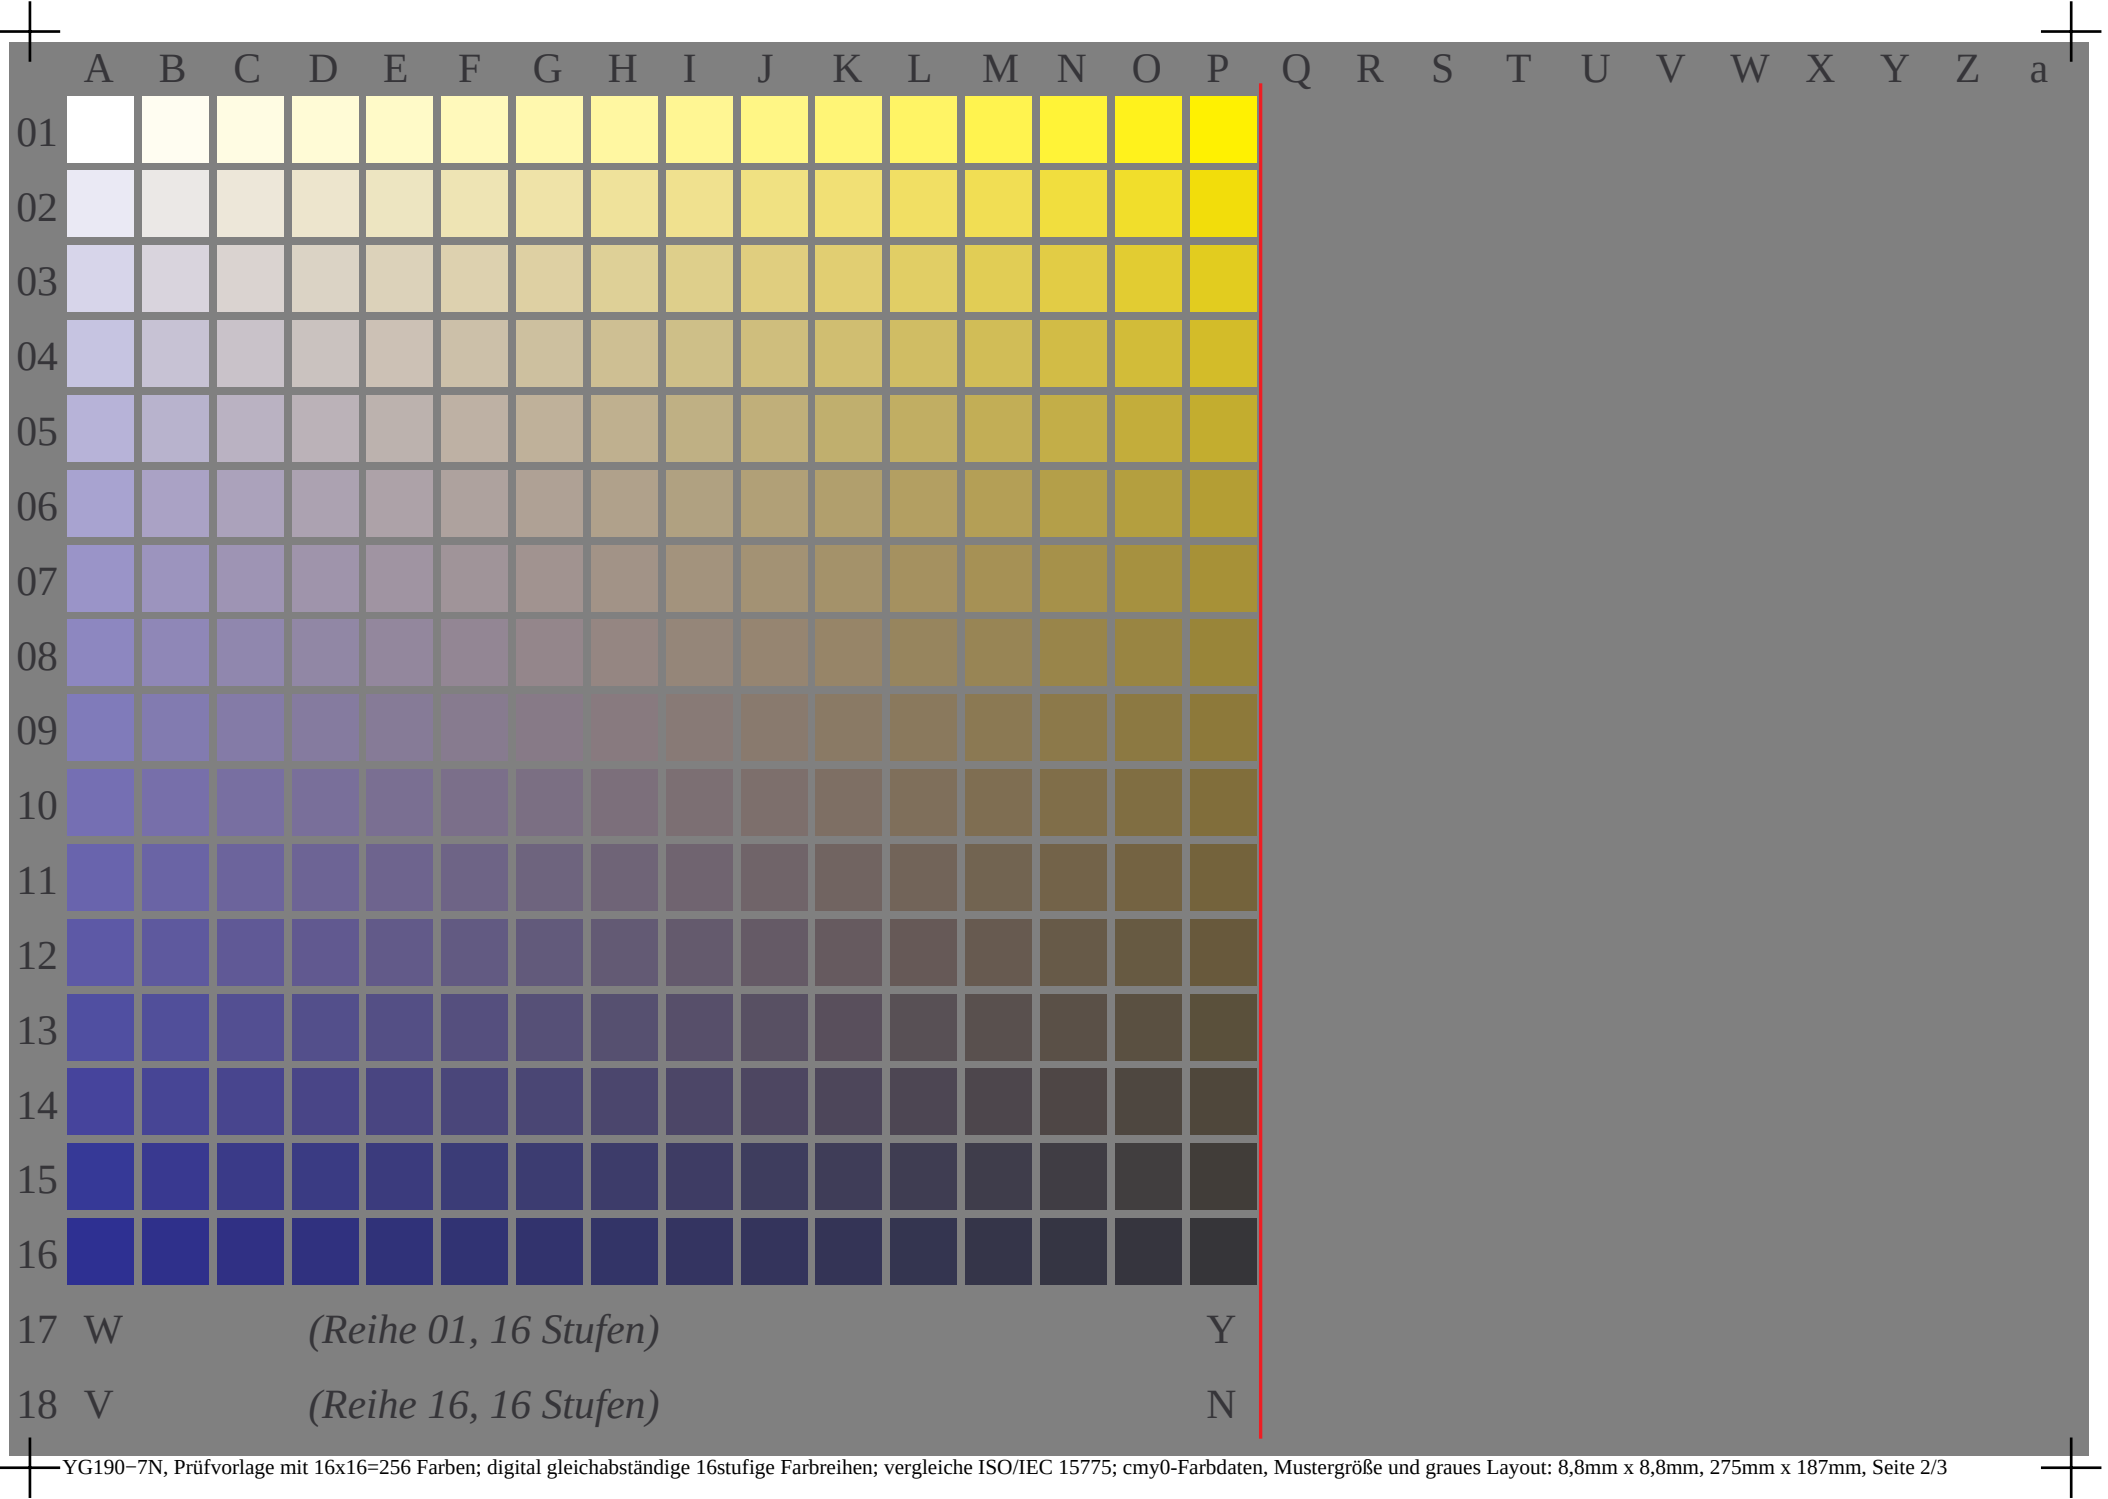

A B C D E F G H I J K L M N O P Q R S T U V W X Y Z a

01
02
03
04
05
06
07
08
09
10
11
12
13
14
15
16

17 W (Reihe 01, 16 Stufen) Y
18 V (Reihe 16, 16 Stufen) N