

See original or copy: <http://web.me.com/klaus.richter/HE31/HE31L0NP.PDF> /.PS
 Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

003448	002893	000530	0375	0000	0000	0000	0625	1000	1000	0000	%0243	A10 \$	003729	003688	000998	0500	0000	0000	0500	1000	1000	0000	%0324	J10 \$	003886	004410	001500	0625	0000	0000	0375	1000	1000	0000	%0405	S10 \$
003448	003223	-00313	0375	0000	0125	0625	1000	0875	0000	%0244	A11 \$	003674	003688	000182	0500	0000	0125	0500	1000	0875	0000	%0325	J11 \$	003789	004641	000563	0625	0000	0125	0375	1000	0875	0000	%0406	S11 \$	
003372	003091	-01053	0375	0000	0250	0625	1000	0750	0000	%0245	A12 \$	003591	004195	-00673	0500	0000	0250	0500	1000	0750	0000	%0326	J12 \$	003768	004889	-00417	0625	0000	0250	0375	1000	0750	0000	%0407	S12 \$	
003210	001813	-01719	0375	0000	0375	0625	1000	0625	0000	%0246	A13 \$	003525	003514	-01359	0500	0000	0375	0500	1000	0625	0000	%0327	J13 \$	003696	005008	-01136	0625	0000	0375	0375	1000	0625	0000	%0408	S13 \$	
003304	001483	-02626	0375	0000	0500	0625	1000	0500	0000	%0247	A14 \$	003335	002525	-02065	0500	0000	0500	0500	1000	0500	0000	%0328	J14 \$	003585	004147	-01721	0625	0000	0500	0375	1000	0500	0000	%0409	S14 \$	
003525	001191	-03398	0375	0000	0625	0625	1000	0375	0000	%0248	A15 \$	003262	002436	-03069	0500	0000	0625	0500	1000	0375	0000	%0329	J15 \$	003247	003288	-02444	0625	0000	0625	0375	1000	0375	0000	%0410	S15 \$	
003648	001316	-04112	0375	0000	0750	0625	1000	0250	0000	%0249	A16 \$	003131	002720	-04115	0500	0000	0750	0500	1000	0250	0000	%0330	J16 \$	003229	003334	-03353	0625	0000	0750	0375	1000	0250	0000	%0411	S16 \$	
003498	001359	-04520	0375	0000	0875	0625	1000	0125	0000	%0250	A17 \$	003172	002114	-04401	0500	0000	0875	0500	1000	0125	0000	%0331	J17 \$	002962	003368	-03861	0625	0000	0875	0375	1000	0125	0000	%0412	S17 \$	
003507	001127	-04620	0375	0000	1000	0625	1000	0000	0000	%0251	A18 \$	003206	001962	-04448	0500	0000	1000	0500	1000	0000	0000	%0332	J18 \$	002975	002750	-04209	0625	0000	1000	0375	1000	0000	0000	%0413	S18 \$	
003758	002037	001431	0375	0125	0000	0625	0875	1000	0000	%0252	B10 \$	003941	002946	-001754	0500	0125	0000	0500	0875	1000	0000	%0333	K10 \$	003946	004123	002267	0625	0125	0000	0375	0875	1000	0000	%0414	T10 \$	
003913	001898	000490	0375	0125	0125	0625	0875	0875	0000	%0253	B11 \$	004184	002642	-000801	0500	0125	0125	0500	0875	0875	0000	%0334	K11 \$	004449	003290	001178	0625	0125	0125	0375	0875	0875	0000	%0415	T11 \$	
003927	002242	-00504	0375	0125	0250	0625	0875	0750	0000	%0254	B12 \$	004146	002887	-001179	0500	0125	0250	0500	0875	0750	0000	%0335	K12 \$	004393	003507	0000352	0625	0125	0250	0375	0875	0750	0000	%0416	T12 \$	
003729	001276	-01050	0375	0125	0375	0625	0875	0625	0000	%0255	B13 \$	004132	002880	-000860	0500	0125	0375	0500	0875	0625	0000	%0336	K13 \$	004381	003850	-000520	0625	0125	0375	0375	0875	0625	0000	%0417	T13 \$	
003571	000859	-02262	0375	0125	0500	0625	0875	0500	0000	%0256	B14 \$	003832	001954	-01541	0500	0125	0500	0500	0875	0500	0000	%0337	K14 \$	004204	003393	-01348	0625	0125	0500	0375	0875	0500	0000	%0418	T14 \$	
004012	000546	-02740	0375	0125	0625	0625	0875	0375	0000	%0257	B15 \$	003847	001694	-02577	0500	0125	0625	0500	0875	0375	0000	%0338	K15 \$	003865	002628	-02024	0625	0125	0625	0375	0875	0375	0000	%0419	T15 \$	
004264	000448	-03268	0375	0125	0750	0625	0875	0250	0000	%0258	B16 \$	003938	001465	-03414	0500	0125	0750	0500	0875	0250	0000	%0339	K16 \$	003908	002400	-02948	0625	0125	0750	0375	0875	0250	0000	%0420	T16 \$	
004183	000647	-04280	0375	0125	0875	0625	0875	0125	0000	%0259	B17 \$	003796	001733	-04188	0500	0125	0875	0500	0875	0125	0000	%0340	K17 \$	003537	002684	-03874	0625	0125	0875	0375	0875	0125	0000	%0421	T17 \$	
003883	000704	-04532	0375	0125	1000	0625	0875	0000	0000	%0260	B18 \$	003584	001662	-04359	0500	0125	1000	0500	0875	0000	0000	%0341	K18 \$	003361	002318	-04154	0625	0125	1000	0375	0875	0000	0000	%0422	T18 \$	
004223	000811	002041	0375	0250	0000	0625	0750	1000	0000	%0261	C10 \$	004544	001772	002411	0500	0250	0000	0500	0750	1000	0000	%0342	L10 \$	004618	002699	002916	0625	0250	0000	0375	0750	1000	0000	%0423	U10 \$	
004208	001079	001170	0375	0250	0125	0625	0750	0875	0000	%0262	C11 \$	004486	001853	001672	0500	0250	0125	0500	0750	0875	0000	%0343	L11 \$	004646	002828	002090	0625	0250	0125	0375	0750	0875	0000	%0424	U11 \$	
004259	001132	000330	0375	0250	0250	0625	0750	0750	0000	%0263	C12 \$	004623	001604	000631	0500	0250	0250	0500	0750	0750	0000	%0344	L12 \$	004980	002416	000937	0625	0250	0250	0375	0750	0750	0000	%0425	U12 \$	
004155	000741	-00407	0375	0250	0375	0625	0750	0625	0000	%0264	C13 \$	004652	001931	-00352	0500	0250	0375	0500	0750	0625	0000	%0345	L13 \$	005008	002740	-00015	0625	0250	0375	0375	0750	0625	0000	%0426	U13 \$	
004115	000359	-01532	0375	0250	0500	0625	0750	0500	0000	%0265	C14 \$	004334	001318	-01813	0500	0250	0500	0500	0750	0500	0000	%0346	L14 \$	004901	002762	-00759	0625	0250	0500	0375	0750	0500	0000	%0427	U14 \$	
004554	000001	-02072	0375	0250	0625	0625	0750	0375	0000	%0266	C15 \$	004242	000945	-02157	0500	0250	0625	0500	0750	0375	0000	%0347	L15 \$	004544	001908	-01451	0625	0250	0625	0375	0750	0375	0000	%0428	U15 \$	
004858	000146	-02574	0375	0250	0750	0625	0750	0250	0000	%0267	C16 \$	004545	000784	-02700	0500	0250	0750	0500	0750	0250	0000	%0348	L16 \$	004413	001720	-02530	0625	0250	0750	0375	0750	0250	0000	%0429	U16 \$	
005024	000191	-03448	0375	0250	0875	0625	0750	0125	0000	%0268	C17 \$	004640	000704	-03792	0500	0250	0875	0500	0750	0125	0000	%0349	L17 \$	004114	002005	-03827	0625	0250	0875	0375	0750	0125	0000	%0430	U17 \$	
004529	000042	-04356	0375	0250	1000	0625	0750	0000	0000	%0269	C18 \$	004347	000847	-04184	0500	0250	1000	0500	0750	0000	0000	%0350	L18 \$	003924	001746	-04065	0625	0250	1000	0375	0750	0000	0000	%0431	U18 \$	
004777	000156	-002790	0375	0375	0000	0625	0625	1000	0000	%0270	D10 \$	005087	000671	-003262	0500	0375	0000	0500	0625	1000	0000	%0351	M10 \$	005223	001641	-003910	0625	0375	0000	0375	0625	1000	0000	%0432	V10 \$	
004711	000032	001870	0375	0375	0125	0625	0625	0875	0000	%0271	D11 \$	005040	000818	-002238	0500	0375	0125	0500	0625	0875	0000	%0352	M11 \$	005424	001478	-002737	0625	0375	0125	0375	0625	0875	0000	%0433	V11 \$	
004613	000127	001094	0375	0375	0250	0625	0625	0750	0000	%0272	D12 \$	005046	000911	-001364	0500	0375	0250	0500	0625	0750	0000	%0353	M12 \$	005407	0010											

N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

See original or copy: <http://web.me.com/klau.s.richter/HE31/HE31L0NP.PDF> /.PS
 Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

003985	005364	001954	0750	0000	0000	0250	1000	1000	0000	%0486	A19	\$
003873	005509	001054	0750	0000	0125	0250	1000	0875	0000	%0487	A20	\$
003859	005780	000034	0750	0000	0250	0250	1000	0750	0000	%0488	A21	\$
003838	006035	-00084	0750	0000	0375	0250	1000	0625	0000	%0489	A22	\$
003627	005516	-01503	0750	0000	0500	0250	1000	0500	0000	%0490	A23	\$
003267	004698	-02131	0750	0000	0625	0250	1000	0375	0000	%0491	A24	\$
002969	004145	-02777	0750	0000	0750	0250	1000	0250	0000	%0492	A25	\$
002893	003905	-03455	0750	0000	0875	0250	1000	0125	0000	%0493	A26	\$
002879	003545	-03904	0750	0000	1000	0250	1000	0000	0000	%0494	A27	\$
004057	005361	003133	0750	0125	0000	0250	0875	1000	0000	%0495	B19	\$
004652	004102	001703	0750	0125	0125	0250	0875	0875	0000	%0496	B20	\$
004588	004295	000853	0750	0125	0250	0250	0875	0750	0000	%0497	B21	\$
004561	004756	-00129	0750	0125	0375	0250	0875	0625	0000	%0498	B22	\$
004368	005068	-01054	0750	0125	0500	0250	0875	0500	0000	%0499	B23	\$
003993	004180	-01772	0750	0125	0625	0250	0875	0375	0000	%0500	B24	\$
003685	003366	-02395	0750	0125	0750	0250	0875	0250	0000	%0501	B25	\$
003403	003769	-03557	0750	0125	0875	0250	0875	0125	0000	%0502	B26	\$
003268	003179	-03906	0750	0125	1000	0250	0875	0000	0000	%0503	B27	\$
004793	003884	004069	0750	0250	0000	0250	0750	1000	0000	%0504	C19	\$
004805	003672	002694	0750	0250	0125	0250	0750	0875	0000	%0505	C20	\$
005338	002937	001407	0750	0250	0250	0250	0750	0750	0000	%0506	C21	\$
005267	003211	-000551	0750	0250	0375	0250	0750	0625	0000	%0507	C22	\$
005155	003748	-00507	0750	0250	0500	0250	0750	0500	0000	%0508	C23	\$
004722	003468	-01372	0750	0250	0625	0250	0750	0375	0000	%0509	C24	\$
004282	002659	-01994	0750	0250	0750	0250	0750	0250	0000	%0510	C25	\$
004076	003033	-03502	0750	0250	0875	0250	0750	0125	0000	%0511	C26	\$
003689	002606	-03952	0750	0250	1000	0250	0750	0000	0000	%0512	C27	\$
005400	002622	005061	0750	0375	0000	0250	0625	1000	0000	%0513	D19	\$
005546	002315	003216	0750	0375	0125	0250	0625	0875	0000	%0514	D20	\$
005496	002561	002333	0750	0375	0250	0250	0625	0750	0000	%0515	D21	\$
005853	002018	001368	0750	0375	0375	0250	0625	0625	0000	%0516	D22	\$
005820	002518	000712	0750	0375	0500	0250	0625	0500	0000	%0517	D23	\$
005736	002689	-00771	0750	0375	0625	0250	0625	0375	0000	%0518	D24	\$
004970	002077	-01430	0750	0375	0750	0250	0625	0250	0000	%0519	D25	\$
004834	002237	-03038	0750	0375	0875	0250	0625	0125	0000	%0520	D26	\$
004495	001697	-03717	0750	0375	1000	0250	0625	0000	0000	%0521	D27	\$
005974	001642	006017	0750	0500	0000	0250	0500	1000	0000	%0522	E19	\$
006175	001275	003819	0750	0500	0125	0250	0500	0875	0000	%0523	E20	\$
006156	001374	002977	0750	0500	0250	0250	0500	0750	0000	%0524	E21	\$
006187	001410	002237	0750	0500	0375	0250	0500	0625	0000	%0525	E22	\$
006310	001412	001216	0750	0500	0500	0250	0500	0500	0000	%0526	E23	\$
006212	002001	-00166	0750	0500	0625	0250	0500	0375	0000	%0527	E24	\$
005633	001502	-01098	0750	0500	0750	0250	0500	0250	0000	%0528	E25	\$
005630	001170	-02437	0750	0500	0875	0250	0500	0125	0000	%0529	E26	\$
005629	000804	-03176	0750	0500	1000	0250	0500	0000	0000	%0530	E27	\$
006450	000628	006572	0750	0625	0000	0250	0375	1000	0000	%0531	F19	\$
006731	000385	004507	0750	0625	0125	0250	0375	0875	0000	%0532	F20	\$
006756	000398	003601	0750	0625	0250	0250	0375	0750	0000	%0533	F21	\$
006727	000474	002940	0750	0625	0375	0250	0375	0625	0000	%0534	F22	\$
006700	000602	002078	0750	0625	0500	0250	0375	0500	0000	%0535	F23	\$
006727	000794	000877	0750	0625	0625	0250	0375	0375	0000	%0536	F24	\$
006441	000879	-00533	0750	0625	0750	0250	0375	0250	0000	%0537	F25	\$
006464	000514	-01750	0750	0625	0875	0250	0375	0125	0000	%0538	F26	\$
007035	-00160	-02421	0750	0625	1000	0250	0375	0000	0000	%0539	F27	\$
007353	-00494	005745	0750	0750	0000	0250	0250	1000	0000	%0540	G19	\$
007390	-00489	005484	0750	0750	0125	0250	0250	0875	0000	%0541	G20	\$
007389	-00434	004351	0750	0750	0250	0250	0250	0750	0000	%0542	G21	\$
007341	-00400	003567	0750	0750	0375	0250	0250	0625	0000	%0543	G22	\$
007299	-00284	002750	0750	0750	0500	0250	0250	0500	0000	%0544	G23	\$
007319	-00197	001709	0750	0750	0625	0250	0250	0375	0000	%0545	G24	\$
007279	000252	004047	0750	0750	0750	0250	0250	0250	0000	%0546	G25	\$
007538	-00244	-00810	0750	0750	0875	0250	0250	0125	0000	%0547	G26	\$
008415	-00952	-01392	0750	0750	1000	0250	0250	0000	0000	%0548	G27	\$
008615	-01414	008954	0750	0875	0000	0250	0125	1000	0000	%0549	H19	\$
008253	-01445	006756	0750	0875	0125	0250	0125	0875	0000	%0550	H20	\$
008150	-01410	005250	0750	0875	0250	0250	0125	0750	0000	%0551	H21	\$
008094	-01509	004359	0750	0875	0375	0250	0125	0625	0000	%0552	H22	\$
008007	-01486	003381	0750	0875	0500	0250	0125	0500	0000	%0553	H23	\$
007866	-01356	002272	0750	0875	0625	0250	0125	0375	0000	%0554	H24	\$
007918	-00984	000759	0750	0875	0750	0250	0125	0250	0000	%0555	H25	\$
008004	-00987	-00160	0750	0875	0875	0250	0125	0125	0000	%0556	H26	\$
008459	-01137	-01340	0750	0875	1000	0250	0125	0000	0000	%0557	H27	\$
008819	-02413	008868	0750	1000	0000	0250	0000	1000	0000	%0558	I19	\$
008682	-02418	007342	0750	1000	0125	0250	0000	0875	0000	%0559	I20	\$
008649	-02475	005713	0750	1000	0250	0250	0000	0750	0000	%0560	I21	\$
008486	-02583	004812	0750	1000	0375	0250	0000	0625	0000	%0561	I22	\$
008431	-02525	003694	0750	1000	0500	0250	0000	0500	0000	%0562	I23	\$
008421	-02314	002420	0750	1000	0625	0250	0000	0375	0000	%0563	I24	\$
008679	-01724	001095	0750	1000	0750	0250	0000	0250	0000	%0564	I25	\$
008541	-01586	000094	0750	1000	0875	0250	0000	0125	0000	%0565	I26	\$
008576	-01277	-00985	0750	1000	1000	0250	0000	0000	0000	%0566	I27	\$
004291	005913	002244	0875	0000	0000	0125	1000	1000	0000	%0567	J19	\$
004235	006044	001513	0875	0000	0125	0125	1000	0875	0000	%0568	J20	\$
004206	006305	000495	0875	0000	0250	0125	1000	0750	0000	%0569	J21	\$
004176												

See original or copy: <http://web.me.com/klaus.richter/HE31/HE31L0NP.PDF> /.PS
 Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

009711	-00103	000228	1000	1000	0000	0000	0000	0000	%0729	b01	\$
009049	-00799	-00468	0875	1000	1000	0125	0000	0000	%0730	b02	\$
008584	-01132	-00924	0750	1000	1000	0250	0000	0000	%0731	b03	\$
008010	-01639	-01283	0625	1000	1000	0375	0000	0000	%0732	b04	\$
007419	-02064	-01690	0500	1000	1000	0500	0000	0000	%0733	b05	\$
006911	-02515	-01954	0375	1000	1000	0625	0000	0000	%0734	b06	\$
006352	-03195	-01969	0250	1000	1000	0750	0000	0000	%0735	b07	\$
005854	-03755	-02165	0125	1000	1000	0875	0000	0000	%0736	b08	\$
005588	-04041	-02198	0000	1000	1000	0900	0000	0000	%0737	b09	\$
009179	-000420	-006070	1000	0875	0875	0000	0125	0125	%0738	c01	\$
008522	-000008	-000280	0875	0875	0875	0125	0125	0125	%0739	c02	\$
008197	-00872	-00206	0750	0875	0875	0250	0125	0125	%0740	c03	\$
007757	-01274	-00560	0625	0875	0875	0375	0125	0125	%0741	c04	\$
007259	-01996	-01163	0500	0875	0875	0500	0125	0125	%0742	c05	\$
006826	-02419	-01400	0375	0875	0875	0625	0125	0125	%0743	c06	\$
006361	-03037	-01493	0250	0875	0875	0750	0125	0125	%0744	c07	\$
005984	-03873	-01671	0125	0875	0875	0875	0125	0125	%0745	c08	\$
005493	-04369	-01949	0000	0875	0875	0900	0125	0125	%0746	c09	\$
008606	-001091	-000870	1000	0750	0750	0000	0250	0250	%0747	d01	\$
007834	-000716	-000711	0875	0750	0750	0125	0250	0250	%0748	d02	\$
007474	-000233	-000280	0750	0750	0750	0250	0250	0250	%0749	d03	\$
007055	-00463	-00184	0625	0750	0750	0375	0250	0250	%0750	d04	\$
006716	-01374	-00605	0500	0750	0750	0500	0250	0250	%0751	d05	\$
006271	-01859	-01158	0375	0750	0750	0625	0250	0250	%0752	d06	\$
005834	-02430	-01338	0250	0750	0750	0750	0250	0250	%0753	d07	\$
005564	-03327	-01543	0125	0750	0750	0875	0250	0250	%0754	d08	\$
005337	-04807	-01778	0000	0750	0750	0900	0250	0250	%0755	d09	\$
007990	-001788	-001188	1000	0625	0625	0000	0375	0375	%0756	e01	\$
007409	-001229	-001113	0875	0625	0625	0125	0375	0375	%0757	e02	\$
006939	-000818	-000676	0750	0625	0625	0250	0375	0375	%0758	e03	\$
006413	-000259	-000234	0625	0625	0625	0375	0375	0375	%0759	e04	\$
006056	-00323	-00117	0500	0625	0625	0500	0375	0375	%0760	e05	\$
005746	-01275	-00781	0375	0625	0625	0625	0375	0375	%0761	e06	\$
005367	-01963	-01078	0250	0625	0625	0750	0375	0375	%0762	e07	\$
004996	-02635	-01367	0125	0625	0625	0875	0375	0375	%0763	e08	\$
004986	-04422	-01595	0000	0625	0625	0900	0375	0375	%0764	e09	\$
007349	-002502	-001828	1000	0500	0500	0000	0500	0500	%0765	f01	\$
006870	-001841	-001536	0875	0500	0500	0125	0500	0500	%0766	f02	\$
006388	-001372	-001111	0750	0500	0500	0250	0500	0500	%0767	f03	\$
005938	-000926	-000590	0625	0500	0500	0375	0500	0500	%0768	f04	\$
005430	-000174	-000342	0500	0500	0500	0500	0500	0500	%0769	f05	\$
005104	-00321	-00077	0375	0500	0500	0625	0500	0500	%0770	f06	\$
004794	-01363	-00741	0250	0500	0500	0750	0500	0500	%0771	f07	\$
004626	-02138	-00978	0125	0500	0500	0875	0500	0500	%0772	f08	\$
004371	-03086	-01183	0000	0500	0500	0900	0500	0500	%0773	f09	\$
006447	-003874	-002137	1000	0375	0375	0000	0625	0625	%0774	g01	\$
006223	-002808	-001766	0875	0375	0375	0125	0625	0625	%0775	g02	\$
005805	-001975	-001364	0750	0375	0375	0250	0625	0625	%0776	g03	\$
005410	-001518	-000942	0625	0375	0375	0375	0625	0625	%0777	g04	\$
004968	-000921	-000431	0500	0375	0375	0500	0625	0625	%0778	g05	\$
004531	-000222	-000203	0375	0375	0375	0625	0625	0625	%0779	g06	\$
004261	-00376	-00088	0250	0375	0375	0750	0625	0625	%0780	g07	\$
004054	-01453	-00555	0125	0375	0375	0875	0625	0625	%0781	g08	\$
003962	-02241	-00832	0000	0375	0375	0900	0625	0625	%0782	g09	\$
005737	-005022	-002599	1000	0250	0250	0000	0750	0750	%0783	h01	\$
005594	-003714	-002025	0875	0250	0250	0125	0750	0750	%0784	h02	\$
005234	-002923	-001412	0750	0250	0250	0250	0750	0750	%0785	h03	\$
004948	-002328	-001045	0625	0250	0250	0375	0750	0750	%0786	h04	\$
004447	-001634	-000626	0500	0250	0250	0500	0750	0750	%0787	h05	\$
004134	-001159	-000280	0375	0250	0250	0625	0750	0750	%0788	h06	\$
003806	-000368	-000059	0250	0250	0250	0750	0750	0750	%0789	h07	\$
003769	-00462	-00185	0125	0250	0250	0875	0750	0750	%0790	h08	\$
003562	-01618	-00582	0000	0250	0250	0900	0750	0750	%0791	h09	\$
004941	-006472	-002789	1000	0125	0125	0000	0875	0875	%0792	i01	\$
004844	-004949	-002280	0875	0125	0125	00125	0875	0875	%0793	i02	\$
004508	-004021	-001750	0750	0125	0125	00250	0875	0875	%0794	i03	\$
004215	-003354	-001231	0625	0125	0125	00375	0875	0875	%0795	i04	\$
003962	-002628	-000797	0500	0125	0125	00500	0875	0875	%0796	i05	\$
003780	-001849	-000460	0375	0125	0125	00625	0875	0875	%0797	i06	\$
003476	-001287	-000064	0250	0125	0125	00750	0875	0875	%0798	i07	\$
003059	-000201	-000050	0125	0125	0125	00875	0875	0875	%0799	i08	\$
003196	-00568	-00195	0000	0125	0125	00900	0875	0875	%0800	i09	\$
004380	-006209	-002609	1000	0000	0000	0000	1000	1000	%0801	j01	\$
004149	-005824	-002412	0875	0000	0000	00125	1000	1000	%0802	j02	\$
003820	-005329	-002123	0750	0000	0000	00250	1000	1000	%0803	j03	\$
003625	-004586	-001593	0625	0000	0000	00375	1000	1000	%0804	j04	\$
003534	-003652	-000969	0500	0000	0000	00500	1000	1000	%0805	j05	\$
003328	-002899	-000561	0375	0000	0000	00625	1000	1000	%0806	j06	\$
003126	-002062	-000188	0250	0000	0000	00750	1000	1000	%0807	j07	\$
002884	-001074	-000039	0125	0000	0000	00875	1000	1000	%0808	j08	\$
002691	-000044	-00172	0000	0000	0000	00900	1000	1000	%0809	j09	\$
009712	-000908	-000223	1000	1000	0000	0000	0000	0000	%0810	b10	\$
009031	-00544	-00656	0875	0875	0875	00125	0000	0000	%0811	b11	\$
008531	-00888	-01274	0750	0750	0750	00250	0000	0000	%0812	b12	\$
007557	-01000	-02251	0625	0625	0625	00375	0000	0000	%0813	b13	\$
006713	-00960	-03802	0500	0500	0500	00500	0000	0000	%0814	b14	\$
005908	-00976	-03649	0375	0375	0375	00625	0000	0000	%0815	b15	\$
005266	-01047	-04233	0250	0250	0250	00750	0000	0000	%0816	b16	\$
004854	-01118	-04575	0125	0125	0125	00875	0000	0000	%0817	b17	\$
004573	-01123	-04797	0000	0000	0000	00900	0000	0000	%0818	b18	\$
008658	-00648	-001730	1000	1000	0875	0000	0125	0000			

%BEG HE21_22.TXT, Separation cmy0*, D65, not adapted \$
%100 x LAB*
%#1000 x (r g b c m y 0) %nr. pos \$
%z004519 006127 002467 %#1000 0000 0000 0000 1000 1000 0000 %0648 S19 %01 0 \$
%z008941 -01093 007864 %#1000 1000 0000 0000 0000 1000 0000 %0720 a19 %Y1 1 \$
%z005508 -06661 002462 %#0000 1000 0000 1000 0000 1000 0000 %0072 I01 %L1 2 \$
%z005583 -04242 -02002 %#0000 1000 1000 1000 0000 0000 0000 %0080 I09 %C1 3 \$
%z004651 -01073 -04757 %#0000 0000 1000 1000 1000 0000 0000 %0008 A09 %V1 4 \$
%z003238 004694 -02889 %#1000 0000 1000 0000 1000 0000 0000 %0656 S27 %M1 5 \$
%z002468 000038 -00123 %#0000 0000 0000 1000 1000 1000 0000 %0000 A01 %N1 6 \$
%z009706 -00097 000229 %#1000 1000 1000 0000 0000 0000 0000 %0728 a27 %W1 7 \$
%\$
%z004380 006209 002609 %#1000 0000 0000 0000 1000 1000 0000 %0801 j01 %02 0 \$
%z008948 -01106 007942 %#1000 1000 0000 0000 0000 1000 0000 %0882 j10 %Y2 1 \$
%z005486 -06556 002166 %#0000 1000 0000 1000 0000 1000 0000 %0963 j19 %L2 2 \$
%z005588 -04041 -02198 %#0000 1000 1000 1000 0000 0000 0000 %0737 b09 %C2 3 \$
%z004579 -01123 -04797 %#0000 0000 1000 1000 1000 0000 0000 %0818 b18 %V2 4 \$
%z003203 004669 -02893 %#1000 0000 1000 0000 1000 0000 0000 %0899 b27 %M2 5 \$
%z002599 000039 -00162 %#0000 0000 0000 1000 1000 1000 0000 %0809 j09 %N2 6 \$
%z009710 -00101 000227 %#1000 1000 1000 0000 0000 0000 0000 %0729 b01 %W2 7 \$
%\$

See original or copy: <http://web.me.com/klaus.richter/HE31/HE31L0NP.PDF> /.PS
Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

%BEG HE21.22.TXT, Separation cmy0*, D65, not adapted S												%100 x LAB*												1000 x (r g b												c m y 0)												%nr.												pos \$											
002374	000056	-00126	0000	0000	0000	0000	1000	1000	1000	0000	%0972	k01	\$	000388	000000	000323	0866	0866	0866	0133	0133	0000	%1053	m23	\$																																														
002773	000194	000078	0125	0125	0125	0875	0875	0875	0875	0875	0000	%0973	k02	\$	000910	-00077	000240	0933	0933	0933	0066	0066	0000	%1054	m24	\$																																													
003567	000373	000098	0250	0250	0250	0750	0750	0750	0750	0750	0000	%0974	k03	\$	002693	-00095	000227	1000	1000	1000	0000	0000	0000	%1055	m25	\$																																													
004354	000265	000218	0375	0375	0375	0625	0625	0625	0625	0625	0000	%0975	k04	\$	000638	000041	-00178	0000	0000	0000	1000	1000	1000	%1056	n10	\$																																													
005389	000210	000323	0500	0500	0500	0500	0500	0500	0500	0500	0000	%0976	k05	\$	002851	000149	-00069	0066	0066	0066	0933	0933	0000	%1057	n11	\$																																													
006476	000245	000239	0625	0625	0625	0735	0375	0375	0375	0375	0000	%0977	k06	\$	003043	000204	000069	0133	0133	0133	0866	0866	0866	%1058	n12	\$																																													
007506	000246	000267	0750	0750	0750	0250	0250	0250	0250	0500	0000	%0978	k07	\$	003417	000288	000067	0200	0200	0200	0800	0800	0000	%1059	n13	\$																																													
008641	000026	000208	0875	0875	0875	0125	0125	0125	0125	0000	0000	%0979	k08	\$	003776	000386	000086	0266	0266	0266	0333	0333	0000	%1060	n14	\$																																													
009708	-00111	000220	1000	1000	1000	0000	0000	0000	0000	0000	0000	%0980	k09	\$	004019	000338	000152	0333	0333	0333	0666	0666	0666	%1061	n15	\$																																													
002419	000049	-00128	0000	0000	0000	0000	1000	1000	1000	1000	0000	%0981	l01	\$	004618	000312	000256	0400	0400	0400	0600	0600	0000	%1062	n16	\$																																													
002802	000189	000062	0125	0125	0125	0875	0875	0875	0875	0875	0000	%0982	l02	\$	005024	000297	000299	0466	0466	0466	0533	0533	0000	%1063	n17	\$																																													
003586	000365	000083	0250	0250	0250	0750	0750	0750	0750	0750	0000	%0983	l03	\$	005674	000258	000275	0533	0533	0533	0666	0466	0466	%1064	n18	\$																																													
004357	000252	000207	0375	0375	0375	0625	0625	0625	0625	0625	0000	%0984	l04	\$	006254	000280	000237	0600	0600	0600	0400	0400	0000	%1065	n19	\$																																													
005404	000208	000302	0500	0500	0500	0500	0500	0500	0500	0500	0000	%0985	l05	\$	006760	000248	000287	0666	0666	0666	0333	0333	0000	%1066	n20	\$																																													
006535	000243	000235	0625	0625	0625	0625	0375	0375	0375	0375	0000	%0986	l06	\$	007301	000272	000314	0734	0734	0734	0266	0266	0266	%1067	n21	\$																																													
007577	000248	000273	0750	0750	0750	0250	0250	0250	0250	0000	0000	%0987	l07	\$	007789	000181	000290	0800	0800	0800	0200	0200	0000	%1068	n22	\$																																													
008620	000050	000222	0875	0875	0875	0125	0125	0125	0125	0000	0000	%0988	l08	\$	008325	000010	000327	0866	0866	0866	0133	0133	0000	%1069	n23	\$																																													
009698	-00107	000223	1000	1000	1000	0000	0000	0000	0000	0000	0000	%0989	l09	\$	008991	-00072	000227	0933	0933	0933	0066	0066	0000	%1070	n24	\$																																													
002343	000033	-00122	0000	0000	0000	0000	1000	1000	1000	1000	0000	%0990	m01	\$	009687	-00095	000213	1000	1000	1000	0000	0000	0000	%1071	n25	\$																																													
002777	000185	000069	0125	0125	0125	0875	0875	0875	0875	0875	0000	%0991	m02	\$	002399	000035	-00169	0000	0000	0000	1000	1000	1000	%1072	k26	\$																																													
003562	000360	000083	0250	0250	0250	0750	0750	0750	0750	0750	0000	%0992	m03	\$	009720	-00101	000215	1000	1000	1000	0000	0000	0000	%1073	k27	\$																																													
004305	000242	000223	0375	0375	0375	0625	0625	0625	0625	0625	0000	%0993	m04	\$	004291	000137	002763	1000	0000	0000	0000	1000	1000	%1074	l26	\$																																													
005326	000193	000326	0500	0500	0500	0500	0500	0500	0500	0500	0000	%0994	m05	\$	005637	-04700	-01626	0000	1000	1000	1000	0000	0000	%1075	l27	\$																																													
006473	000220	000242	0625	0625	0625	0625	0375	0375	0375	0375	0000	%0995	m06	\$	008886	-01064	008266	1000	1000	0000	0000	0000	1000	%1076	m26	\$																																													
007529	000215	000292	0750	0750	0750	0250	0250	0250	0250	0000	0000	%0996	m07	\$	004496	-01127	-04888	0000	1000	1000	1000	1000	0000	%1077	m27	\$																																													
008647	000023	000231	0875	0875	0875	0125	0125	0125	0125	0000	0000	%0997	m08	\$	005421	-00919	002563	1000	0000	0000	0000	0000	1000	%1078	n26	\$																																													
009721	-00113	000232	1000	1000	1000	0000	0000	0000	0000	0000	0000	%0998	m09	\$	003104	004801	-03074	1000	0000	1000	0000	1000	0000	%1079	n27	\$																																													
002308	000033	-00112	0000	0000	0000	0000	1000	1000	1000	1000	0000	%0999	n01	\$	%\$																																																								
002798	000179	000089	0125	0125	0125	0875	0875	0875	0875	0875	0000	%1000	n02	\$	%004291	006137	002763	%#1000	0000	0000	0000	1000	1000	0000	%1074	l26	%03 0	\$																																											
003594	000345	000107	0250	0250	0250	0750	0750	0750	0750	0750	0000	%1001	n03	\$	%008886	-01064	008266	%#1000	1000	0000	0000	0000	1000	0000	%1076	m26	%03 1	\$																																											
004314	000245	000248	0375	0375	0375	0625	0625	0625	0625	0625	0000	%1002	n04	\$	%005421	-00919	002563	%#0000	1000	0000	1000	0000	1000	0000	%1078	n26	%L3 2	\$																																											
005326	000179	000347	0500	0500	0500	0500	0500	0500	0500	0500	0000	%1003	n05	\$	%005637	-04700	-01626	%#0000	1000	1000	1000	0000	0000	0000	%1075	l27	%C3 3	\$																																											
006444	000222	000249	0625	0625	0625	0625	0375	0375	0375	0375	0000	%1004	n06	\$	%004496	-01127	-04888	%#0000	0000	1000	1000	1000	0000	0000	%1077	m27	%03 4	\$																																											
007515	000232	000285	0750	0750	0750	0250	0250	0250	0250	0500	0000	%1005	n07	\$	%003104	004801	-03074	%#1000	0000	1000	0000	1000	0000	0000	%1079	n27	%M3 5	\$																																											
008656	000019	000222	0875	0875	0875	0125	0125	0125	0125	0000	0000	%1006	n08	\$	%002399	000035	-00169	%#0000	0000	0000	1000	1000	1000	0000	%1072	k26	%M3 6	\$																																											
009709	-00096	000201	1000	1000	1000	0000	0000	0000	0000	0000	0000	%1007	n09	\$	%009720	-00101	000215	%#1000	1000	1000	0000	0000	0000	0000	%1073	k27	%M3 7	\$																																											
002716	000041	-00171	0000	0000	0000	0000	1000	1000	1000	1000	0000	%1008	k10	\$	%\$																																																								
002848	000137	-00055	0066	0066	0066	0933	0933	0933	0933	0933	0000	%1009	k11	\$	%002545	000049	-00149	%#0000	0000	0000	1000	1000	1000	0000	%0972	k01	%N4 6	\$																																											
003079	000208	000072	0133	0133	0133	0866	0866	0866	0866	0866	0000	%1010	k12	\$	%009705	-00099	000209	%#1000	1000	1000	0000	0000	0000	0000	%0980	k09	%M4 7	\$																																											
003426	000274	000117	0200	0200	0200	0800	0800	0800	0800	0800	0000	%1011	k13	\$	%\$																																																								
003779	000385	000112	0266	0266	0266	0633	0633	0633	0633	0633	0000	%1012	k14	\$	%002564	000044	-00151	%#0000	0000	0000	1000	1000	1000	0000	%0981	l01	%N5 6	\$																																											
004248	000328	000147	0333	0333	0333	0666	0666	0666	0666	0666	0000	%1013	k15	\$	%009702	-00094	000211	%#1000	1000	1000	0000	0000	0000	0000	%0989	l09	%M5 7	\$																																											
004704	000287	000254	0400	0400	0400	0600	0600	0600	0600	0600	0000	%1014	k16	\$	%\$																																																								
005283	000288	000283	0466	0466	0466	0533	0533	0533	0533	0533	0000	%1015	k17	\$	%002497	000036	-00149	%#0000	0000	0000	1000	1000																																																	

See original or copy: <http://web.me.com/klaus.richter/HE31/HE31L0NP.PDF> /.PS
 Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

003448	002874	000604	0375	0000	0000	0625	1000	1000	0000	%0243	A10 \$	003729	003674	001060	0500	0000	0000	0500	1000	1000	0000	%0324	J10 \$	003886	004398	001554	0625	0000	0000	0375	1000	1000	0000	%0405	S10 \$
003485	003203	00237	0375	0000	0125	0625	1000	0875	0000	%0244	A11 \$	003674	004035	000167	0500	0000	0125	0500	1000	0875	0000	%0325	J11 \$	003789	004627	000622	0625	0000	0125	0375	1000	0875	0000	%0406	S11 \$
003372	003069	00973	0375	0000	0250	0625	1000	0750	0000	%0245	A12 \$	003591	004178	000604	0500	0000	0250	0500	1000	0750	0000	%0326	J12 \$	003768	004875	000356	0625	0000	0250	0375	1000	0750	0000	%0407	S12 \$
003210	001788	001631	0375	0000	0375	0625	1000	0625	0000	%0246	A13 \$	003525	003495	001287	0500	0000	0375	0500	1000	0625	0000	%0327	J13 \$	003696	004993	01072	0625	0000	0375	0375	1000	0625	0000	%0408	S13 \$
003304	001461	002543	0375	0000	0500	0625	1000	0500	0000	%0247	A14 \$	003335	002503	001983	0500	0000	0500	0500	1000	0500	0000	%0328	J14 \$	003505	004128	001648	0625	0000	0500	0375	1000	0500	0000	%0409	S14 \$
003525	001173	003325	0375	0000	0625	0625	1000	0375	0000	%0248	A15 \$	003262	002413	002975	0500	0000	0625	0500	1000	0375	0000	%0329	J15 \$	003247	002365	002358	0625	0000	0625	0375	1000	0375	0000	%0410	S15 \$
003648	001308	004045	0375	0000	0750	0625	1000	0250	0000	%0249	A16 \$	003131	002694	004024	0500	0000	0750	0500	1000	0250	0000	%0330	J16 \$	003229	003310	003266	0625	0000	0750	0375	1000	0250	0000	%0411	S16 \$
003498	001340	004446	0375	0000	0875	0625	1000	0125	0000	%0250	A17 \$	003172	002089	004312	0500	0000	0875	0500	1000	0125	0000	%0331	J17 \$	002962	003339	003761	0625	0000	0875	0375	1000	0125	0000	%0412	S17 \$
003507	001109	004547	0375	0000	1000	0625	1000	0000	0000	%0251	A18 \$	003206	001937	004360	0500	0000	1000	0500	1000	0000	0000	%0332	J18 \$	002975	002721	004110	0625	0000	1000	0375	1000	0000	0000	%0413	S18 \$
003758	002023	001492	0375	0125	0000	0625	0875	1000	0000	%0252	B10 \$	003941	002936	001806	0500	0125	0000	0875	1000	0000	0000	%0333	K10 \$	003946	004113	002319	0625	0125	0000	0375	0875	1000	0000	%0414	T10 \$
003913	001887	000543	0375	0125	0125	0625	0875	0875	0000	%0253	B11 \$	004184	002636	000841	0500	0125	0125	0500	0875	0875	0000	%0334	K11 \$	004449	003289	001205	0625	0125	0125	0375	0875	0875	0000	%0415	T11 \$
003927	002232	00451	0375	0125	0250	0625	0875	0750	0000	%0254	B12 \$	004146	002880	000137	0500	0125	0250	0500	0875	0750	0000	%0335	K12 \$	004393	003505	000382	0625	0125	0250	0375	0875	0750	0000	%0416	T12 \$
003729	001261	009888	0375	0125	0375	0625	0875	0625	0000	%0255	B13 \$	004132	002873	000817	0500	0125	0375	0500	0875	0625	0000	%0336	K13 \$	004381	003848	000489	0625	0125	0375	0375	0875	0625	0000	%0417	T13 \$
003571	000842	002192	0375	0125	0500	0625	0875	0500	0000	%0256	B14 \$	003832	001941	001484	0500	0125	0500	0500	0875	0500	0000	%0337	K14 \$	004204	003387	001309	0625	0125	0500	0375	0875	0500	0000	%0418	T14 \$
004012	000537	002692	0375	0125	0625	0625	0875	0375	0000	%0257	B15 \$	003847	001682	002521	0500	0125	0625	0500	0875	0375	0000	%0338	K15 \$	003865	002616	001968	0625	0125	0625	0375	0875	0375	0000	%0419	T15 \$
004264	000444	003232	0375	0125	0750	0625	0875	0250	0000	%0258	B16 \$	003938	001455	003362	0500	0125	0750	0500	0875	0250	0000	%0339	K16 \$	003908	002389	002895	0625	0125	0750	0375	0875	0250	0000	%0420	T16 \$
004183	000641	004240	0375	0125	0875	0625	0875	0125	0000	%0259	B17 \$	003796	001720	004129	0500	0125	0875	0500	0875	0125	0000	%0340	K17 \$	003537	002666	003802	0625	0125	0875	0375	0875	0125	0000	%0421	T17 \$
003883	000693	004477	0375	0125	1000	0625	0875	0000	0000	%0260	B18 \$	003584	001645	004290	0500	0125	1000	0500	0875	0000	0000	%0341	K18 \$	003361	002296	004074	0625	0125	1000	0375	0875	0000	0000	%0422	T18 \$
004223	000806	002079	0375	0250	0000	0625	0750	1000	0000	%0261	C10 \$	004544	001773	002433	0500	0250	0000	0000	0750	1000	0000	%0342	L10 \$	004618	002701	002935	0625	0250	0000	0375	0750	1000	0000	%0423	U10 \$
004208	001074	001209	0375	0250	0125	0625	0750	0875	0000	%0262	C11 \$	004486	001852	001697	0500	0250	0125	0500	0750	0875	0000	%0343	L11 \$	004466	002831	002108	0625	0250	0125	0375	0750	0875	0000	%0424	U11 \$
004259	001128	000366	0375	0250	0250	0625	0750	0750	0000	%0263	C12 \$	004623	001606	000650	0500	0250	0250	0500	0750	0750	0000	%0344	L12 \$	004980	002250	000938	0625	0250	0500	0375	0750	0750	0000	%0425	U12 \$
004155	000735	003666	0375	0250	0375	0625	0750	0625	0000	%0264	C13 \$	004652	001933	003334	0500	0250	0375	0500	0750	0625	0000	%0345	L13 \$	005008	002750	000616	0625	0250	0375	0375	0750	0625	0000	%0426	U13 \$
004115	000352	014888	0375	0250	0500	0625	0750	0500	0000	%0265	C14 \$	004334	001315	000981	0500	0250	0500	0500	0750	0500	0000	%0346	L14 \$	004991	002769	000754	0625	0250	0500	0375	0750	0500	0000	%0427	U14 \$
004554	000002	002050	0375	0250	0625	0625	0750	0375	0000	%0266	C15 \$	004545	000975	002677	0500	0250	0750	0500	0750	0250	0000	%0347	L15 \$	005011	002769	000754	0625	0250	0500	0375	0750	0500	0000	%0428	U15 \$
004858	001139	002567	0375	0250	0750	0625	0750	0250	0000	%0267	C16 \$	004545	000975	002677	0500	0250	0750	0500	0750	0250	0000	%0348	L16 \$	004413	001719	002501	0625	0250	0750	0375	0750	0250	0000	%0429	U16 \$
005024	00181	003449	0375	0250	0875	0625	0750	0125	0000	%0268	C17 \$	004640	000707	003774	0500	0250	0875	0500	0750	0125	0000	%0349	L17 \$	004114	001937	003783	0625	0250	0875	0375	0750	0125	0000	%0430	U17 \$
004529	000042	004333	0375	0250	1000	0625	0750	0000	0000	%0269	C18 \$	004347	000844	004151	0500	0250	1000	0500	0750	0000	0000	%0350	L18 \$	003924	001735	004012	0625	0250	1000	0375	0750	0000	0000	%0431	U18 \$
004777	00151	002801	0375	0375	0000	0625	0625	1000	0000	%0270	D10 \$	005087	000682	003258	0500	0375	0000	0500	0625	1000	0000	%0351	M10 \$	005223	001655	003900	0625	0375	0000	0375	0625	1000	0000	%0432	V10 \$
004711	000028	001884	0375	0375	0125	0625	0625	0875	0000	%0271	D11 \$	005040	000828	002236	0500	0375	0125	0500	0625	0875	0000	%0352	M11 \$	005424	001496	002717	0625	0375	0125	0375	0625	0875	0000		

N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

003985	005355	002004	0750	0000	0000	0250	1000	1000	0000	%0486	A19	\$
003873	005497	001109	0750	0000	0125	0250	1000	0875	0000	%0487	A20	\$
003859	005768	000090	0750	0000	0250	0250	1000	0750	0000	%0488	A21	\$
003838	006022	-00827	0750	0000	0375	0250	1000	0625	0000	%0489	A22	\$
003627	005499	-01436	0750	0000	0500	0250	1000	0500	0000	%0490	A23	\$
003267	004675	-02046	0750	0000	0625	0250	1000	0375	0000	%0491	A24	\$
002969	004417	-02677	0750	0000	0750	0250	1000	0250	0000	%0492	A25	\$
002893	003935	-03352	0750	0000	0875	0250	1000	0125	0000	%0493	A26	\$
002878	003514	-03800	0750	0000	1000	0250	1000	0000	0000	%0494	A27	\$
004057	005352	003179	0750	0125	0000	0250	0875	1000	0000	%0495	B10	\$
004652	004104	001720	0750	0125	0125	0250	0875	0875	0000	%0496	B20	\$
004588	004296	000873	0750	0125	0250	0250	0875	0750	0000	%0497	B21	\$
004561	004757	-00108	0750	0125	0375	0250	0875	0625	0000	%0498	B22	\$
004368	005065	-01022	0750	0125	0500	0250	0875	0500	0000	%0499	B23	\$
003993	004170	-01723	0750	0125	0625	0250	0875	0375	0000	%0500	B24	\$
003685	003350	-02330	0750	0125	0750	0250	0875	0250	0000	%0501	B25	\$
003403	003749	-03479	0750	0125	0875	0250	0875	0125	0000	%0502	B26	\$
003268	003156	-03821	0750	0125	1000	0250	0875	0000	0000	%0503	B27	\$
004793	003890	004079	0750	0250	0000	0250	0750	1000	0000	%0504	C19	\$
004805	003678	002703	0750	0250	0125	0250	0750	0875	0000	%0505	C20	\$
005338	002952	001391	0750	0250	0250	0250	0750	0750	0000	%0506	C21	\$
005267	003225	000538	0750	0250	0375	0250	0750	0625	0000	%0507	C22	\$
005155	003761	-00514	0750	0250	0500	0250	0750	0500	0000	%0508	C23	\$
004722	003472	-01358	0750	0250	0625	0250	0750	0375	0000	%0509	C24	\$
004282	002655	-01959	0750	0250	0750	0250	0750	0250	0000	%0510	C25	\$
004076	003025	-03457	0750	0250	0875	0250	0750	0125	0000	%0511	C26	\$
003689	002591	-03888	0750	0250	1000	0250	0750	0000	0000	%0512	C27	\$
005400	002639	005042	0750	0375	0000	0250	0625	1000	0000	%0513	D19	\$
005548	002335	003190	0750	0375	0125	0250	0625	0875	0000	%0514	D20	\$
005496	002579	002309	0750	0375	0250	0250	0625	0750	0000	%0515	D21	\$
005853	002044	001327	0750	0375	0375	0250	0625	0625	0000	%0516	D22	\$
005820	002433	001632	0750	0375	0500	0250	0625	0500	0000	%0517	D23	\$
005536	002709	007096	0750	0375	0625	0250	0625	0375	0000	%0518	D24	\$
004970	002086	-01429	0750	0375	0750	0250	0625	0250	0000	%0519	D25	\$
004834	002243	-03030	0750	0375	0875	0250	0625	0125	0000	%0520	D26	\$
004495	001697	-03692	0750	0375	1000	0250	0625	0000	0000	%0521	D27	\$
005974	001670	005970	0750	0500	0000	0250	0500	1000	0000	%0522	E19	\$
006175	001307	003762	0750	0500	0125	0250	0500	0875	0000	%0523	E20	\$
006156	001405	002920	0750	0500	0250	0250	0500	0750	0000	%0524	E21	\$
006187	001441	002180	0750	0500	0375	0250	0500	0625	0000	%0525	E22	\$
006310	001446	001152	0750	0500	0500	0250	0500	0500	0000	%0526	E23	\$
006212	002034	-00225	0750	0500	0625	0250	0500	0375	0000	%0527	E24	\$
005633	001524	-01128	0750	0500	0750	0250	0500	0250	0000	%0528	E25	\$
005630	001192	-02467	0750	0500	0875	0250	0500	0125	0000	%0529	E26	\$
005629	000825	-03206	0750	0500	1000	0250	0500	0000	0000	%0530	E27	\$
006450	000664	005001	0750	0625	0000	0250	0375	1000	0000	%0531	F19	\$
006731	000427	004422	0750	0625	0125	0250	0375	0875	0000	%0532	F20	\$
006756	000440	003516	0750	0625	0250	0250	0375	0750	0000	%0533	F21	\$
006727	000516	002856	0750	0625	0375	0250	0375	0625	0000	%0534	F22	\$
006700	000643	001995	0750	0625	0500	0250	0375	0500	0000	%0535	F23	\$
006727	000836	000793	0750	0625	0625	0250	0375	0375	0000	%0536	F24	\$
006441	000915	-00603	0750	0625	0750	0250	0375	0250	0000	%0537	F25	\$
006464	000551	-01821	0750	0625	0875	0250	0375	0125	0000	%0538	F26	\$
007035	-00112	-02520	0750	0625	1000	0250	0375	0000	0000	%0539	F27	\$
007353	-00440	007431	0750	0750	0000	0250	0250	1000	0000	%0540	G19	\$
007390	-00435	005367	0750	0750	0125	0250	0250	0875	0000	%0541	G20	\$
007389	-00379	004235	0750	0750	0250	0250	0250	0750	0000	%0542	G21	\$
007341	-00347	003453	0750	0750	0375	0250	0250	0500	0000	%0543	G22	\$
007299	-00232	002638	0750	0750	0500	0250	0250	0500	0000	%0544	G23	\$
007319	-00144	001596	0750	0750	0625	0250	0250	0375	0000	%0545	G24	\$
007270	-000304	002096	0750	0750	0750	0250	0250	0250	0000	%0546	G25	\$
007538	-00187	-00933	0750	0750	0875	0250	0250	0125	0000	%0547	G26	\$
008415	-00879	-01558	0750	0750	1000	0250	0250	0000	0000	%0548	G27	\$
008615	-01336	008778	0750	0750	0000	0250	0125	1000	0000	%0549	H19	\$
008253	-01374	006598	0750	0750	0125	0250	0125	0875	0000	%0550	H20	\$
008150	-01342	005097	0750	0750	0250	0250	0125	0750	0000	%0551	H21	\$
008094	-01441	004208	0750	0750	0375	0250	0125	0625	0000	%0552	H22	\$
008007	-01420	002335	0750	0750	0500	0250	0125	0500	0000	%0553	H23	\$
007866	-01293	002123	0750	0750	0625	0250	0125	0375	0000	%0554	H24	\$
007918	-00919	000617	0750	0750	0875	0750	0250	0125	0000	%0555	H25	\$
008004	-00921	-00306	0750	0750	0875	0250	0125	0125	0000	%0556	H26	\$
008459	-01062	-01509	0750	0750	1000	0250	0125	0000	0000	%0557	H27	\$
008819	-02332	008682	0750	1000	0000	0250	0000	1000	0000	%0558	I19	\$
008682	-02339	007163	0750	1000	0125	0250	0000	0875	0000	%0559	I20	\$
008649	-02396	005535	0750	1000	0250	0250	0000	0750	0000	%0560	I21	\$
008486	-02508	004464	0750	1000	0375	0250	0000	0625	0000	%0561	I22	\$
008431	-02451	003526	0750	1000	0500	0250	0000	0500	0000	%0562	I23	\$
008421	-02240	002254	0750	1000	0625	0250	0000	0375	0000	%0563	I24	\$
008679	-01646	000916	0750	1000	0750	0250	0000	0250	0000	%0564	I25	\$
008441	-01510	-00077	0750	1000	0875	0250	0000	0125	0000	%0565	I26	\$
008576	-01202	-01154	0750	1000	1000	0250	0000	0000	0000	%0566	I27	\$
004291	005090	002279	0875	0000	0000	0125	1000	1000	0000	%0567	J19	\$
004235	006039	001550	0875	0000	0125	0125	1000	0875	0000	%0568	J20	\$
004206	006299	000535	0875	0000	0250	0125	1000	0750	0000	%0569	J21	\$
004176	006573	-00422	0875	0000	0375	0125	1000	0625	0000	%0570	J22	\$
004086	006331	-01309	0875	0000	0500	0125	1000	0500	0000	%0571	J23	\$
003718	005748	-01758	0875	0000	0625	0125	1000	0375	0000	%0572	J24	\$
003321	005039	-02341	0875	0000	0750	0125	1000	0250	0000	%0573	J25	\$
003069	004441	-02867	0875	0000	0875	0125	1000	0125	0000	%0574	J26	\$
002878	004245	-03338	0875	0000	1000	0125	1000	0000	0000	%0575	J27	\$
004330	005718	003317	0875	0125	0000	0125	0875	1000	0000	%0576	K19	\$
004342	005073	002185	0875	0125	0125	0125	0875	0875	0000	%0577	K20	\$
004843	005413	001273	0875	0125	0250	0125	0875	0750	0000	%0578	K21	\$
004809	005810	000172	0875	0125	0375	0125	0875	0625	0000	%0579	K22	\$
004716	006137	-00977	0875	0125	0500	0125	0875	0500	0000	%0580	K23	\$
004384	005430	-01569	0875	0125	0625	0125	0875	0375	0000	%0581	K24	\$
004035	004937	-02159	0875	0125	0750	0125	0875	0250	0000	%0582	K25	\$
003687	004314	-02874	0875	0125	0875	0125	0875	0125	0000	%0583	K26	\$
003419	003852	-03453	0875	0125	1000	0125	0875	0000	0000	%0584	K27	\$
004916	004985	004722	0875	0250	0000	0125	0750	1000	0000	%0585	L19	\$
004993	004885	003690	0875	0250	0125	0125	0750	0875				

N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

See original or copy: <http://web.me.com/klau.s.richter/HE31/HE31L0NP.PDF> /.PS
 Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

009711	-00002	000001	1000	1000	1000	0000	0000	0000	0000	%0729	b01	\$
009049	-00711	-00659	0875	1000	1000	0125	0000	0000	0000	%0730	b02	\$
008584	-01053	-01090	0750	1000	1000	0250	0000	0000	0000	%0731	b03	\$
008010	-01571	-01418	0625	1000	1000	0375	0000	0000	0000	%0732	b04	\$
007419	-02008	-01792	0500	1000	1000	0500	0000	0000	0000	%0733	b05	\$
006911	-02469	-02029	0375	1000	1000	0625	0000	0000	0000	%0734	b06	\$
006352	-03160	-02013	0250	1000	1000	0750	0000	0000	0000	%0735	b07	\$
005854	-03730	-02181	0125	1000	1000	0875	0000	0000	0000	%0736	b08	\$
005588	-04021	-02199	0000	1000	1000	1000	0000	0000	0000	%0737	b09	\$
009179	000511	000471	1000	0875	0875	0000	0125	0125	0000	%0738	c01	\$
008522	000086	000117	0875	0875	0875	0125	0125	0125	0000	%0739	c02	\$
008197	-00801	-00351	0750	0875	0875	0250	0125	0125	0000	%0740	c03	\$
007757	-01212	-00680	0625	0875	0875	0375	0125	0125	0000	%0741	c04	\$
007259	-01943	-01256	0500	0875	0875	0500	0125	0125	0000	%0742	c05	\$
006826	-02375	-01469	0375	0875	0875	0625	0125	0125	0000	%0743	c06	\$
006361	-03002	-01537	0250	0875	0875	0750	0125	0125	0000	%0744	c07	\$
005984	-03845	-01694	0125	0875	0875	0875	0125	0125	0000	%0745	c08	\$
005493	-04351	-01945	0000	0875	0875	1000	0125	0125	0000	%0746	c09	\$
008606	001171	000703	1000	0750	0750	0000	0250	0250	0000	%0747	d01	\$
007834	000780	000587	0875	0750	0750	0125	0250	0250	0000	%0748	d02	\$
007474	000290	000175	0750	0750	0750	0250	0250	0250	0000	%0749	d03	\$
007055	-00414	-00266	0625	0750	0750	0375	0250	0250	0000	%0750	d04	\$
006716	-01332	-00669	0500	0750	0750	0500	0250	0250	0000	%0751	d05	\$
006271	-01825	-01197	0375	0750	0750	0625	0250	0250	0000	%0752	d06	\$
005834	-02405	-01353	0250	0750	0750	0750	0250	0250	0000	%0753	d07	\$
005564	-03307	-01544	0125	0750	0750	0875	0250	0250	0000	%0754	d08	\$
005337	-04792	-01766	0000	0750	0750	1000	0250	0250	0000	%0755	d09	\$
007990	001856	001054	1000	0625	0625	0000	0375	0375	0000	%0756	e01	\$
007409	001285	001012	0875	0625	0625	0125	0375	0375	0000	%0757	e02	\$
006939	000865	000601	0750	0625	0625	0250	0375	0375	0000	%0758	e03	\$
006413	000295	000187	0625	0625	0625	0375	0375	0375	0000	%0759	e04	\$
006056	-00294	-00144	0500	0625	0625	0500	0375	0375	0000	%0760	e05	\$
005740	-01252	-00791	0375	0625	0625	0625	0375	0375	0000	%0761	e06	\$
005367	-01947	-01067	0250	0625	0625	0750	0375	0375	0000	%0762	e07	\$
004996	-02627	-01336	0125	0625	0625	0875	0375	0375	0000	%0763	e08	\$
004986	-04413	-01563	0000	0625	0625	1000	0375	0375	0000	%0764	e09	\$
007349	002556	001729	1000	0500	0500	0000	0500	0500	0000	%0765	f01	\$
006870	001887	001464	0875	0500	0500	0125	0500	0500	0000	%0766	f02	\$
006388	001408	001066	0750	0500	0500	0250	0500	0500	0000	%0767	f03	\$
005938	000952	000569	0625	0500	0500	0375	0500	0500	0000	%0768	f04	\$
005430	000190	000349	0500	0500	0500	0500	0500	0500	0000	%0769	f05	\$
005104	-00311	-00052	0375	0500	0500	0625	0500	0500	0000	%0770	f06	\$
004794	-01358	-00699	0250	0500	0500	0750	0500	0500	0000	%0771	f07	\$
004626	-02137	-00927	0125	0500	0500	0875	0500	0500	0000	%0772	f08	\$
004371	-03090	-01118	0000	0500	0500	1000	0500	0500	0000	%0773	f09	\$
006447	003911	002080	1000	0375	0375	0000	0625	0625	0000	%0774	g01	\$
006223	002841	001730	0875	0375	0375	0125	0625	0625	0000	%0775	g02	\$
005805	002000	001350	0750	0375	0375	0250	0625	0625	0000	%0776	g03	\$
005410	001535	000950	0625	0375	0375	0375	0625	0625	0000	%0777	g04	\$
004968	000929	000463	0500	0375	0375	0500	0625	0625	0000	%0778	g05	\$
004531	000221	000259	0375	0375	0375	0625	0625	0625	0000	%0779	g06	\$
004261	-00382	-00017	0250	0375	0375	0750	0625	0625	0000	%0780	g07	\$
004054	-01463	-00473	0125	0375	0375	0875	0625	0625	0000	%0781	g08	\$
003962	-02253	-00744	0000	0375	0375	1000	0625	0625	0000	%0782	g09	\$
005737	005045	002500	1000	0250	0250	0000	0750	0750	0000	%0783	h01	\$
005594	003734	002024	0875	0250	0250	0125	0750	0750	0000	%0784	h02	\$
005234	002936	001429	0750	0250	0250	0250	0750	0750	0000	%0785	h03	\$
004816	002333	001086	0625	0250	0250	0375	0750	0750	0000	%0786	h04	\$
004447	001632	000687	0500	0250	0250	0500	0750	0750	0000	%0787	h05	\$
004134	001150	000358	0375	0250	0250	0625	0750	0750	0000	%0788	h06	\$
003806	000353	000155	0250	0250	0250	0750	0750	0750	0000	%0789	h07	\$
003769	-00478	-00087	0125	0250	0250	0875	0750	0750	0000	%0790	h08	\$
003562	-01638	-00472	0000	0250	0250	1000	0750	0750	0000	%0791	h09	\$
004941	006479	002823	1000	0125	0125	0000	0875	0875	0000	%0792	i01	\$
004844	004954	002319	0875	0125	0125	0125	0875	0875	0000	%0793	i02	\$
004508	004019	001807	0750	0125	0125	0250	0875	0875	0000	%0794	i03	\$
004215	003347	001304	0625	0125	0125	0375	0875	0875	0000	%0795	i04	\$
003962	002616	000885	0500	0125	0125	0500	0875	0875	0000	%0796	i05	\$
003780	001833	000557	0375	0125	0125	0625	0875	0875	0000	%0797	i06	\$
003476	001266	000178	0250	0125	0125	0750	0875	0875	0000	%0798	i07	\$
003059	000171	000187	0125	0125	0125	0875	0875	0875	0000	%0799	i08	\$
003196	-00595	-00065	0000	0125	0125	1000	0875	0875	0000	%0800	i09	\$
004380	006205	002673	1000	0000	0000	0000	1000	1000	0000	%0801	j01	\$
004149	005816	002490	0875	0000	0000	0125	1000	1000	0000	%0802	j02	\$
003820	005315	002218	0750	0000	0000	0250	1000	1000	0000	%0803	j03	\$
003625	004567	001699	0625	0000	0000	0375	1000	1000	0000	%0804	j04	\$
003534	003632	001080	0500	0000	0000	0500	1000	1000	0000	%0805	j05	\$
003328	002874	000683	0375	0000	0000	0625	1000	1000	0000	%0806	j06	\$
003126	002034	000321	0250	0000	0000	0750	1000	1000	0000	%0807	j07	\$
002884	001040	000107	0125	0000	0000	0875	1000	1000	0000	%0808	j08	\$
002691	000006	-00015	0000	0000	0000	1000	1000	1000	0000	%0809	j09	\$
009712	000002	-00003	1000	1000	1000	0000	0000	0000	0000	%0810	b10	\$
009031	-00456	-00847	0875	0875	0875	0125	0125	0000	0000	%0811	b11	\$
008531	-00810	-01437	0750	0750	0750	0250	0250	0000	0000	%0812	b12	\$
007557	-0099											

%BEG HE21_22.TXT, Separation cmy0*, D65, adapted \$
%100 x LAB*a %1000 x (r g b c m y 0) %nr. pos \$
%z004519 006127 002491 %#1000 0000 0000 0000 1000 1000 0000 %0648 S19 %01 0 \$
%z008941 -01009 007672 %#1000 1000 0000 0000 0000 1000 0000 %0720 a19 %Y1 1 \$
%z005508 -06642 002438 %#0000 1000 0000 1000 0000 1000 0000 %0072 I01 %L1 2 \$
%z005683 -04220 -02035 %#0000 1000 1000 1000 0000 0000 0000 %0080 I09 %C1 3 \$
%z004651 -01070 -04740 %#0000 0000 1000 1000 1000 0000 0000 %0008 A09 %V1 4 \$
%z003238 004670 -02803 %#1000 0000 1000 0000 1000 0000 0000 %0656 S27 %M1 5 \$
%z002468 000000 000000 %#0000 0000 1000 1000 1000 1000 0000 %0000 A01 %N1 6 \$
%z009706 000000 000000 %#1000 1000 1000 0000 0000 0000 0000 %0728 a27 %W1 7 \$
%\$
%z004380 006205 002673 %#1000 0000 0000 0000 1000 1000 0000 %0801 j01 %02 0 \$
%z008948 -01020 007756 %#1000 1000 0000 0000 0000 1000 0000 %0882 j10 %Y2 1 \$
%z005486 -06538 002170 %#0000 1000 0000 1000 0000 1000 0000 %0963 j19 %L2 2 \$
%z005588 -04021 -02199 %#0000 1000 1000 1000 0000 0000 0000 %0737 b09 %C2 3 \$
%z004579 -01123 -04743 %#0000 0000 1000 1000 1000 0000 0000 %0818 b18 %V2 4 \$
%z003203 004642 -02764 %#1000 0000 1000 0000 1000 0000 0000 %0899 b27 %M2 5 \$
%z002599 000000 000000 %#0000 0000 1000 1000 1000 1000 0000 %0809 j09 %N2 6 \$
%z009710 000000 000000 %#1000 1000 1000 0000 0000 0000 0000 %0729 b01 %W2 7 \$
%\$

See original or copy: <http://web.me.com/klaus.richter/HE31/HE31L0NP.PDF> /.PS
Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

%BEG HE21_22.TXT, Separation cmy0*, D65, adapted S																			
%100 x LAB*a 1000 x (r g b c m y 0)																			

N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

See original or copy: <http://web.me.com/klaus.richter/HE31/HE31L0NP.PDF> /.PS
 Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

003559	003052	000671	0375	0000	0000	0625	1000	1000	0000	%0243	A10 \$	003828	003894	001181	0500	0000	0000	0500	1000	1000	0000	%0324	J10 \$	004011	004650	001721	0625	0000	0000	0375	1000	1000	0000	%0405	S10 \$
003519	003300	-00158	0375	0000	0125	0625	1000	0875	0000	%0244	A11 \$	003772	004175	000307	0500	0000	0125	0500	1000	0875	0000	%0325	J11 \$	003910	004804	001874	0625	0000	0125	0375	1000	0875	0000	%0406	S11 \$
003427	003086	-00918	0375	0000	0250	0625	1000	0750	0000	%0245	A12 \$	003682	004242	-00467	0500	0000	0250	0500	1000	0750	0000	%0326	J12 \$	003883	004960	-00164	0625	0000	0250	0375	1000	0750	0000	%0407	S12 \$
003217	001713	-01683	0375	0000	0375	0625	1000	0625	0000	%0246	A13 \$	003585	003489	-01209	0500	0000	0375	0500	1000	0625	0000	%0327	J13 \$	003803	005009	-00887	0625	0000	0375	0375	1000	0625	0000	%0408	S13 \$
003279	001252	-02649	0375	0000	0500	0625	1000	0500	0000	%0247	A14 \$	003535	002403	-02000	0500	0000	0500	0500	1000	0500	0000	%0328	J14 \$	003575	004093	-01547	0625	0000	0500	0375	1000	0500	0000	%0409	S14 \$
003472	000817	-03476	0375	0000	0625	0625	1000	0375	0000	%0248	A15 \$	003251	002172	-03047	0500	0000	0625	0500	1000	0375	0000	%0329	J15 \$	003276	003139	-02351	0625	0000	0625	0375	1000	0375	0000	%0410	S15 \$
003575	000803	-04220	0375	0000	0750	0625	1000	0250	0000	%0249	A16 \$	003093	002261	-04141	0500	0000	0750	0500	1000	0250	0000	%0330	J16 \$	003235	003039	-03294	0625	0000	0750	0375	1000	0250	0000	%0411	S16 \$
003411	000737	-04652	0375	0000	0875	0625	1000	0125	0000	%0250	A17 \$	003106	001553	-04482	0500	0000	0875	0500	1000	0125	0000	%0331	J17 \$	002952	002966	-03827	0625	0000	0875	0375	1000	0125	0000	%0412	S17 \$
003409	000461	-04772	0375	0000	1000	0625	1000	0000	0000	%0251	A18 \$	003135	001385	-04541	0500	0000	1000	0500	1000	0000	0000	%0332	J18 \$	002933	002256	-04239	0625	0000	1000	0375	1000	0000	0000	%0413	S18 \$
003820	002274	-001522	0375	0125	0000	0625	0875	1000	0000	%0252	B10 \$	004028	003218	000189	0500	0125	0000	0500	0875	1000	0000	%0333	K10 \$	004069	004418	-002460	0625	0125	0000	0375	1000	0000	0000	%0414	T10 \$
003961	002045	-000578	0375	0125	0125	0625	0875	0875	0000	%0253	B11 \$	004253	002839	000026	0500	0125	0125	0500	0875	0875	0000	%0334	K11 \$	004539	003531	001335	0625	0125	0125	0375	0875	0875	0000	%0415	T11 \$
003969	002287	-00406	0375	0125	0250	0625	0875	0750	0000	%0254	B12 \$	004208	002985	-00043	0500	0125	0250	0500	0875	0750	0000	%0335	K12 \$	004478	003673	000522	0625	0125	0250	0375	0875	0750	0000	%0416	T12 \$
003738	001236	-01019	0375	0125	0375	0625	0875	0625	0000	%0255	B13 \$	004183	002903	-00735	0500	0125	0375	0500	0875	0625	0000	%0336	K13 \$	004463	003932	-00337	0625	0125	0375	0375	0875	0625	0000	%0417	T13 \$
003542	000659	-02303	0375	0125	0500	0625	0875	0500	0000	%0256	B14 \$	003846	001885	-01490	0500	0125	0500	0500	0875	0500	0000	%0337	K14 \$	004260	003381	-01209	0625	0125	0500	0375	0875	0500	0000	%0418	T14 \$
003963	000262	-02818	0375	0125	0625	0625	0875	0375	0000	%0257	B15 \$	003830	001492	-02585	0500	0125	0625	0500	0875	0375	0000	%0338	K15 \$	003886	002531	-01955	0625	0125	0625	0375	0875	0375	0000	%0419	T15 \$
004199	000075	-03376	0375	0125	0750	0625	0875	0250	0000	%0258	B16 \$	003893	001117	-03473	0500	0125	0750	0500	0875	0250	0000	%0339	K16 \$	003900	002177	-02933	0625	0125	0750	0375	0875	0250	0000	%0420	T16 \$
004091	000073	-04432	0375	0125	0875	0625	0875	0125	0000	%0259	B17 \$	003732	001241	-04274	0500	0125	0875	0500	0875	0125	0000	%0340	K17 \$	003508	002296	-03485	0625	0125	0875	0375	0875	0125	0000	%0421	T17 \$
003781	000053	-04699	0375	0125	1000	0625	0875	0000	0000	%0260	B18 \$	003511	001112	-04462	0500	0125	1000	0500	0875	0000	0000	%0341	K18 \$	003311	001841	-04205	0625	0125	1000	0375	0875	0000	0000	%0422	T18 \$
004264	001080	-002069	0375	0250	0000	0625	0750	1000	0000	%0261	C10 \$	004610	002095	-02478	0500	0250	0000	0500	0750	1000	0000	%0342	L10 \$	004710	003064	-03022	0625	0250	0800	0375	0750	1000	0000	%0423	T19 \$
004248	001278	-001217	0375	0250	0125	0625	0750	0875	0000	%0262	C11 \$	004546	002120	-001751	0500	0250	0125	0500	0750	0875	0000	%0343	L11 \$	004734	003143	-002215	0625	0250	0125	0375	0750	0875	0000	%0424	T20 \$
004286	001239	-000380	0375	0250	0250	0625	0750	0750	0000	%0263	C12 \$	004666	001766	-000703	0500	0250	0250	0500	0750	0750	0000	%0344	L12 \$	005045	002635	-001048	0625	0250	0250	0375	0750	0750	0000	%0425	T21 \$
004163	000745	-003084	0375	0250	0375	0625	0750	0625	0000	%0264	C13 \$	004689	001986	-00268	0500	0250	0375	0500	0750	0625	0000	%0345	L13 \$	005068	002635	-001048	0625	0250	0250	0375	0750	0750	0000	%0426	T22 \$
004093	000226	-01565	0375	0250	0500	0625	0750	0500	0000	%0265	C14 \$	004345	001185	-00978	0500	0250	0500	0500	0750	0500	0000	%0346	L14 \$	004949	002808	-00642	0625	0250	0500	0375	0750	0500	0000	%0427	T23 \$
004512	-00215	-02146	0375	0250	0625	0625	0750	0375	0000	%0266	C15 \$	004218	000769	-02186	0500	0250	0625	0500	0750	0375	0000	%0347	L15 \$	004559	001855	-01400	0625	0250	0625	0375	0750	0375	0000	%0428	T24 \$
004801	-00439	-02676	0375	0250	0750	0625	0750	0250	0000	%0267	C16 \$	004504	000529	-02761	0500	0250	0750	0500	0750	0250	0000	%0348	L16 \$	004399	001536	-02533	0625	0250	0750	0375	0750	0250	0000	%0429	T25 \$
004942	-00626	-03595	0375	0250	0875	0625	0750	0125	0000	%0268	C17 \$	004568	000258	-03910	0500	0250	0875	0500	0750	0125	0000	%0349	L17 \$	004071	001617	-03875	0625	0250	0875	0375	0750	0125	0000	%0430	T26 \$
004422	-00581	-04543	0375	0250	1000	0625	0750	0000	0000	%0269	C18 \$	004264	000321	-04317	0500	0250	1000	0500	0750	0000	0000	%0350	L18 \$	003865	001290	-04143	0625	0250	1000	0375	0750	0000	0000	%0431	T27 \$
004805	000148	-002766	0375	0375	0000	0625	0625	1000	0000	%0270	D10 \$	005136	001041	-003267	0500	0375	0000	0500	0625	1000	0000	%0351	M10 \$	005298	002069	-003945	0625	0375	0000	0375	0625	1000	0000	%0432	T28 \$
004733	000198	-001862	0375	0375	0125	0625	0625	0875	0000	%0271	D11 \$	005083	001117	-002264	0500	0375	0125	0500	0625	0875	0000	%0352	M11 \$	005487	001839	-002788	0625	0375	0125	0375	0625	0875	0000	%0433	T29 \$
004629	000272	-001098	0375	0375	0250	0625	062																												

N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

004140	005616	002230	0750	0000	0000	0250	1000	1000	0000	%0486	A19	\$
004025	005694	001348	0750	0000	0125	0250	1000	0875	0000	%0487	A20	\$
004007	005880	000347	0750	0000	0250	0250	1000	0750	0000	%0488	A21	\$
003980	006049	-00563	0750	0000	0375	0250	1000	0625	0000	%0489	A22	\$
003743	005478	-01233	0750	0000	0500	0250	1000	0500	0000	%0490	A23	\$
003345	004593	-01933	0750	0000	0625	0250	1000	0375	0000	%0491	A24	\$
003015	003947	-02639	0750	0000	0750	0250	1000	0250	0000	%0492	A25	\$
002814	003654	-03362	0750	0000	0875	0250	1000	0125	0000	%0493	A26	\$
002872	003145	-03862	0750	0000	1000	0250	1000	0000	0000	%0494	A27	\$
004221	005672	003388	0750	0125	0000	0250	0875	1000	0000	%0495	B10	\$
004769	004389	001900	0750	0125	0125	0250	0875	0875	0000	%0496	B20	\$
004700	004514	001065	0750	0125	0250	0250	0875	0750	0000	%0497	B21	\$
004674	004882	000108	0750	0125	0375	0250	0875	0625	0000	%0498	B22	\$
004475	005102	-00809	0750	0125	0500	0250	0875	0500	0000	%0499	B23	\$
004061	004139	-01602	0750	0125	0625	0250	0875	0375	0000	%0500	B24	\$
003717	003241	-02297	0750	0125	0750	0250	0875	0250	0000	%0501	B25	\$
003415	003474	-03485	0750	0125	0875	0250	0875	0125	0000	%0502	B26	\$
003251	002794	-03889	0750	0125	1000	0250	0875	0000	0000	%0503	B27	\$
004922	004304	004208	0750	0250	0000	0250	0750	1000	0000	%0504	C19	\$
004919	004030	002854	0750	0250	0125	0250	0750	0875	0000	%0505	C20	\$
005421	003214	001541	0750	0250	0250	0250	0750	0750	0000	%0506	C21	\$
005346	003409	000701	0750	0250	0375	0250	0750	0625	0000	%0507	C22	\$
005233	003843	-00335	0750	0250	0500	0250	0750	0500	0000	%0508	C23	\$
004778	003464	-01232	0750	0250	0625	0250	0750	0375	0000	%0509	C24	\$
004305	002571	-01922	0750	0250	0750	0250	0750	0250	0000	%0510	C25	\$
004069	002753	-03474	0750	0250	0875	0250	0750	0125	0000	%0511	C26	\$
003656	002211	-03973	0750	0250	1000	0250	0750	0000	0000	%0512	C27	\$
005504	003112	005106	0750	0375	0000	0250	0625	1000	0000	%0513	D19	\$
005631	002723	003299	0750	0375	0125	0250	0625	0875	0000	%0514	D20	\$
005580	002912	002440	0750	0375	0250	0250	0625	0750	0000	%0515	D21	\$
005914	002281	001456	0750	0375	0375	0250	0625	0625	0000	%0516	D22	\$
005877	002654	000285	0750	0375	0500	0250	0625	0500	0000	%0517	D23	\$
005514	002733	000659	0750	0375	0625	0250	0625	0375	0000	%0518	D24	\$
004990	002638	-01371	0750	0375	0750	0250	0625	0250	0000	%0519	D25	\$
004821	002011	-03034	0750	0375	0875	0250	0625	0125	0000	%0520	D26	\$
004448	001322	-03775	0750	0375	1000	0250	0625	0000	0000	%0521	D27	\$
006062	002178	005991	0750	0500	0000	0250	0500	1000	0000	%0522	E19	\$
006242	001720	003844	0750	0500	0125	0250	0500	0875	0000	%0523	E20	\$
006219	001763	003021	0750	0500	0250	0250	0500	0750	0000	%0524	E21	\$
006244	001741	002292	0750	0500	0375	0250	0500	0625	0000	%0525	E22	\$
006355	001643	001276	0750	0500	0500	0250	0500	0500	0000	%0526	E23	\$
006252	002087	-00080	0750	0500	0625	0250	0500	0375	0000	%0527	E24	\$
005646	001473	-01057	0750	0500	0750	0250	0500	0250	0000	%0528	E25	\$
005607	000984	-02464	0750	0500	0875	0250	0500	0125	0000	%0529	E26	\$
005579	000491	-03253	0750	0500	1000	0250	0500	0000	0000	%0530	E27	\$
005521	001184	006487	0750	0625	0000	0250	0375	1000	0000	%0531	F19	\$
006786	000861	004481	0750	0625	0125	0250	0375	0875	0000	%0532	F20	\$
006805	000816	003594	0750	0625	0250	0250	0375	0750	0000	%0533	F21	\$
006771	000844	002945	0750	0625	0375	0250	0375	0625	0000	%0534	F22	\$
006738	000896	002096	0750	0625	0500	0250	0375	0500	0000	%0535	F23	\$
006755	000963	000909	0750	0625	0625	0250	0375	0375	0000	%0536	F24	\$
006451	000877	-00508	0750	0625	0750	0250	0375	0250	0000	%0537	F25	\$
006441	000378	-01783	0750	0625	0875	0250	0375	0125	0000	%0538	F26	\$
006984	-00413	-02513	0750	0625	1000	0250	0375	0000	0000	%0539	F27	\$
007409	000100	007389	0750	0750	0000	0250	0250	1000	0000	%0540	G19	\$
007436	000031	005401	0750	0750	0125	0250	0250	0875	0000	%0541	G20	\$
007428	000021	004296	0750	0750	0250	0250	0250	0750	0000	%0542	G21	\$
007374	000035	003523	0750	0750	0375	0250	0250	0500	0000	%0543	G22	\$
007326	000044	002723	0750	0750	0500	0250	0250	0500	0000	%0544	G23	\$
007337	000025	001693	0750	0750	0625	0250	0250	0375	0000	%0545	G24	\$
007290	000331	000415	0750	0750	0750	0250	0250	0250	0000	%0546	G25	\$
007518	-00318	-00849	0750	0750	0875	0250	0250	0125	0000	%0547	G26	\$
008369	-01117	-01487	0750	0750	1000	0250	0250	0000	0000	%0548	G27	\$
008665	-00758	008726	0750	0875	0000	0250	0125	0000	0000	%0549	H19	\$
008290	-00868	006604	0750	0875	0125	0250	0125	0875	0000	%0550	H20	\$
008177	-00910	005136	0750	0875	0250	0250	0125	0750	0000	%0551	H21	\$
008113	-01072	004257	0750	0875	0375	0250	0125	0625	0000	%0552	H22	\$
008017	-01120	003290	0750	0875	0500	0250	0125	0500	0000	%0553	H23	\$
007867	-01087	002192	0750	0875	0625	0250	0125	0375	0000	%0554	H24	\$
007907	-00878	000699	0750	0875	0750	0250	0125	0250	0000	%0555	H25	\$
007979	-00992	-00231	0750	0875	0875	0250	0125	0125	0000	%0556	H26	\$
008410	-01301	-01444	0750	0875	1000	0250	0125	0000	0000	%0557	H27	\$
008850	-01749	008596	0750	1000	0000	0250	0000	1000	0000	%0558	I19	\$
008705	-01799	007123	0750	1000	0125	0250	0000	0875	0000	%0559	I20	\$
008660	-01926	005531	0750	1000	0250	0250	0000	0750	0000	%0560	I21	\$
008487	-02085	004638	0750	1000	0375	0250	0000	0625	0000	%0561	I22	\$
008422	-02106	003534	0750	1000	0500	0250	0000	0500	0000	%0562	I23	\$
008402	-02008	002279	0750	1000	0625	0250	0000	0375	0000	%0563	I24	\$
008056	-01566	000987	0750	1000	0750	0250	0000	0250	0000	%0564	I25	\$
008507	-01549	-00014	0750	1000	0875	0250	0000	0125	0000	%0565	I26	\$
008425	-01389	-01090	0750	1000	1000	0250	0000	0000	0000	%0566	I27	\$
004465	006183	002550	0875	0000	0000	0125	1000	1000	0000	%0567	J19	\$
004406	006265	001835	0875	0000	0125	0125	1000	0875	0000	%0568	J20	\$
004374	006446	000840	0875	0000	0250	0125	1000	0750	0000	%0569	J21	\$
004340	006631	-01013	0875	0000	0375	0125	1000	0625	0000	%0570	J22	\$
004227	006320	-01029	0875	0000	0500	0125	1000	0500	0000	%0571	J23	\$
003834	005696	-01545	0875	0000	0625	0125	1000	0375	0000	%0572	J24	\$
003404	004919	-02210	0875	0000	0750	0125	1000	0250	0000	%0573	J25	\$
003350	004656	-02809	0875	0000	0875	0125	1000	0125	0000	%0574	J26	\$
003297	003969	-03329	0875	0000	1000	0125	1000	0000	0000	%0575	J27	\$
004505	006046	003558	0875	0125	0000	0125	0875	1000	0000	%0576	K19	\$
005088	005384	002427	0875	0125	0125	0125	0875	0875	0000	%0577	K20	\$
004990	005656	001540	0875	0125	0250	0125	0875	0750	0000	%0578	K21	\$
004954	005958	000463	0875	0125	0375	0125	0875	0625	0000	%0579	K22	\$
004854	006174	-00681	0875	0125	0500	0125	0875	0500	0000	%0580	K23	\$
004491	005415	-01347	0875	0125	0625	0125	0875	0375	0000	%0581	K24	\$
004116	004863	-02004	0875	0125	0750	0125	0875	0250	0000	%0582	K25	\$
003732	004147	-02802	0875	0125	0875	0125	0875	0125	0000	%0583	K26	\$
003435	003582	-03449	0875	0125	1000	0125	0875	0000	0000	%0584	K27	\$
005077	005406	004900	0875	0250	0000	0125	0750	1000	0000	%0585	L19	\$
005146	005278	003896	0875	0250	0125	0125	0750					

N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

See original or copy: <http://web.me.com/klaus.richter/HE31/HE31L0NP.PDF> /.PS
Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

009712	-00073	000221	1000	1000	1000	0000	0000	0000	0000	0000	%0729	b01	\$	009713	-00068	000216	1000	1000	1000	0000	0000	0000	0000	0000	0000	%0810	b10	\$	009709	-00070	000223	1000	1000	1000	0000	0000	0000	0000	0000	0000	0000	0000	%0801	b11	\$		
009023	-00848	-00530	0875	1000	1000	00125	0000	0000	0000	0000	%0730	b02	\$	009008	-00612	-00707	0875	0875	1000	0125	0125	0000	0000	0000	0000	0000	%0811	b11	\$	009004	000316	-00437	1000	0875	1000	0000	0125	0000	0000	0000	0000	0000	0000	%0802	b10	\$	
008543	-01234	-01020	0750	1000	1000	00250	0000	0000	0000	0000	%0731	b03	\$	008489	-01036	-01362	0750	0750	1000	0250	0250	0000	0000	0000	0000	0000	%0812	b12	\$	008235	000974	-00917	1000	0750	1000	0000	0250	0000	0000	0000	0000	0000	0000	%0803	b21	\$	
007951	-01787	-01421	0625	1000	1000	00375	0000	0000	0000	0000	%0732	b04	\$	007492	-01273	-02380	0625	0625	1000	0375	0375	0000	0000	0000	0000	0000	%0813	b13	\$	007387	001783	-01278	1000	0625	1000	0000	0375	0000	0000	0000	0000	0000	0000	%0804	b21	\$	
007342	-02272	-01869	0500	1000	1000	00500	0000	0000	0000	0000	%0733	b05	\$	006631	-01343	-03162	0500	0500	1000	0500	0500	0000	0000	0000	0000	0000	%0814	b14	\$	006404	002474	-01787	1000	0500	1000	0000	0500	0000	0000	0000	0000	0000	0000	%0805	b23	\$	
006819	-02771	-02169	0375	1000	1000	00625	0000	0000	0000	0000	%0734	b06	\$	005906	-01484	-03844	0375	0375	1000	0625	0625	0000	0000	0000	0000	0000	%0815	b15	\$	005302	002923	-02421	1000	0375	1000	0000	0625	0000	0000	0000	0000	0000	0000	%0806	b24	\$	
006245	-03470	-02226	0250	1000	1000	00750	0000	0000	0000	0000	%0735	b07	\$	005142	-01703	-04467	0250	0250	1000	0750	0750	0000	0000	0000	0000	0000	%0816	b16	\$	004226	003819	-02795	1000	0250	1000	0000	0750	0000	0000	0000	0000	0000	0000	%0807	b25	\$	
005730	-04094	-02461	0125	1000	1000	00875	0000	0000	0000	0000	%0736	b08	\$	004715	-01883	-04838	0125	0125	1000	0875	0875	0000	0000	0000	0000	0000	%0817	b17	\$	003674	004194	-02919	1000	0125	1000	0000	0875	0000	0000	0000	0000	0000	0000	%0808	b26	\$	
005458	-04403	-02511	0000	1000	1000	00900	0000	0000	0000	0000	%0737	b09	\$	004430	-01962	-05308	0000	0000	1000	1000	1000	0000	0000	0000	0000	0000	%0818	b18	\$	003262	004458	-02723	1000	0000	1000	0000	1000	0000	0000	0000	0000	0000	0000	%0809	b27	\$	
005197	000548	000682	1000	0875	0875	0000	0125	0125	0000	0000	%0738	c01	\$	009668	-00442	-001698	1000	1000	0875	0000	0000	0125	0000	0000	0000	0000	%0819	c10	\$	009142	-00099	000409	0875	1000	0875	0125	0000	0125	0000	0000	0000	0000	0000	%0900	c19	\$	
008527	000052	000278	0875	0875	0875	0125	0125	0125	0000	0000	%0739	c02	\$	008718	000056	000207	0875	0875	0875	0125	0125	0125	0000	0000	0000	0000	%0820	c11	\$	008658	000078	000247	0875	0875	0875	0125	0125	0125	0000	0000	0000	0000	0000	0000	%0901	c20	\$
008174	-00885	-00270	0750	0875	0875	0250	0125	0125	0000	0000	%0740	c03	\$	007896	-00336	-00756	0750	0750	0875	0250	0250	0125	0000	0000	0000	0000	%0821	c12	\$	007726	000093	-00599	0875	0750	0875	0125	0250	0125	0000	0000	0000	0000	0000	%0902	c21	\$	
007719	-01326	-00658	0625	0875	0875	0375	0125	0125	0000	0000	%0741	c04	\$	007244	-00629	-01459	0625	0625	0875	0375	0375	0125	0000	0000	0000	0000	%0822	c13	\$	006982	001215	-01075	0875	0625	0875	0125	0375	0125	0000	0000	0000	0000	0000	0000	%0903	c22	\$
007194	-02125	-01322	0500	0875	0875	0500	0125	0125	0000	0000	%0742	c05	\$	006438	-00770	-02259	0500	0500	0875	0500	0125	0000	0000	0000	0000	0000	%0823	c14	\$	006611	002019	-01570	0875	0500	0875	0125	0500	0125	0000	0000	0000	0000	0000	0000	%0904	c23	\$
006747	-02586	-01592	0375	0875	0875	0625	0125	0125	0000	0000	%0743	c06	\$	005788	-01059	-02835	0375	0375	0875	0625	0625	0125	0000	0000	0000	0000	%0824	c15	\$	005303	002747	-02092	0875	0375	0875	0125	0625	0125	0000	0000	0000	0000	0000	0000	%0905	c24	\$
006266	-03227	-01726	0250	0875	0875	0750	0125	0125	0000	0000	%0744	c07	\$	005200	-01458	-03486	0250	0250	0875	0750	0750	0125	0000	0000	0000	0000	%0825	c16	\$	004457	003430	-02633	0875	0250	0875	0125	0750	0125	0000	0000	0000	0000	0000	0000	%0906	c25	\$
005869	-04115	-01958	0125	0875	0875	0875	0125	0125	0000	0000	%0745	c08	\$	004749	-01659	-03916	0125	0125	0875	0875	0125	0000	0000	0000	0000	0000	%0826	c17	\$	003744	004143	-02728	0875	0125	0875	0125	0875	0125	0000	0000	0000	0000	0000	0000	%0907	c26	\$
005362	-04698	-02270	0000	0875	0875	1000	0125	0125	0000	0000	%0746	c09	\$	004369	-01920	-04889	0000	0000	0875	1000	1000	0125	0000	0000	0000	0000	%0827	c18	\$	003140	004226	-02750	0875	0800	0875	0125	1000	0125	0000	0000	0000	0000	0000	0000	%0908	c27	\$
006041	001280	000912	1000	0750	0750	0000	0250	0250	0000	0000	%0747	d01	\$	009536	-00530	-002798	1000	1000	0750	0000	0000	0250	0000	0000	0000	0000	%0828	d00	\$	008735	-01396	-000617	0750	1000	0750	0250	0800	0250	0000	0000	0000	0000	0000	0000	%0909	d10	\$
007458	000863	000238	0875	0750	0750	0125	0250	0250	0000	0000	%0748	d02	\$	008625	-00630	-001484	0875	0875	0750	0125	0125	0250	0000	0000	0000	0000	%0829	d11	\$	008121	-00797	000529	0750	0875	0750	0250	0125	0250	0000	0000	0000	0000	0000	0000	%0910	d20	\$
007483	000292	000288	0750	0750	0750	0250	0250	0250	0000	0000	%0749	d03	\$	008620	-00250	-000568	0750	0750	0250	0250	0250	0250	0000	0000	0000	0000	%0830	d12	\$	007501	000008	000008	0750	0750	0750	0250	0250	0250	0000	0000	0000	0000	0000	0000	%0911	d21	\$
007041	-00480	-00218	0625	0750	0750	0375	0250	0250	0000	0000	%0750	d04	\$	008617	-00480	-00218	0625	0625	0750	0750	0250	0000	0000	0000	0000	0000	%0831	d13	\$	005055	000012	-000008	0750	0750	0750	0250	0250	0250	0000	0000	0000	0000	0000	0000	%0912	d22	\$
006675	-01432	-00710	0500	0750	0750	0500	0250	0250	0000	0000	%0751	d05	\$	008218	-00495	-01426	0500	0500	0750	0500	0500	0250	0000	0000	0000	0000	%0832	d14	\$	005842	001428	-01045	0750	0500	0750	0250	0250	0250	0000	0000	0000	0000	0000	0000	%0913	d23	\$
006209	-01993	-01307	0375	0750	0750	0625	0250	0250	0000	0000	%0752	d06	\$	005451	-00765	-02165	0375	0375	0750	0625	0625	0250	0000	0000	0000	0000	%0833	d15	\$	005028	002020	-01389	0750														

%BEG HE21_22.TXT, Separation cmy0*, D50, not adapted \$
%100 x LAB*
%#1000 x (r g b c m y 0) %nr. pos \$
%z004700 006416 002782 %#1000 0000 0000 0000 1000 1000 0000 %0648 S19 %01 0 \$
%z008993 -00443 007705 %#1000 1000 0000 0000 0000 1000 0000 %0720 a19 %Y1 1 \$
%z005412 -06320 002069 %#0000 1000 0000 1000 0000 1000 0000 %0072 I01 %L1 2 \$
%z005554 -04578 -02317 %#0000 1000 1000 1000 0000 0000 0000 %0080 I09 %C1 3 \$
%z004506 -01892 -05034 %#0000 0000 1000 1000 1000 0000 0000 %0008 A09 %V1 4 \$
%z003297 004489 -02719 %#1000 0000 1000 0000 1000 0000 0000 %0656 S27 %M1 5 \$
%z002466 000032 -00125 %#0000 0000 0000 1000 1000 1000 0000 %0000 A01 %N1 6 \$
%z009707 -00066 000222 %#1000 1000 1000 0000 0000 0000 0000 %0728 a27 %W1 7 \$
%\$
%z004565 006493 002927 %#1000 0000 0000 0000 1000 1000 0000 %0801 j01 %02 0 \$
%z009000 -00456 007781 %#1000 1000 0000 0000 0000 1000 0000 %0882 j10 %Y2 1 \$
%z005388 -06246 001781 %#0000 1000 0000 1000 0000 1000 0000 %0963 j19 %L2 2 \$
%z005458 -04403 -02511 %#0000 1000 1000 1000 0000 0000 0000 %0737 b09 %C2 3 \$
%z004430 -01962 -05080 %#0000 0000 1000 1000 1000 0000 0000 %0818 b18 %V2 4 \$
%z003262 004458 -02723 %#1000 0000 1000 0000 1000 0000 0000 %0899 b27 %M2 5 \$
%z002597 000029 -00164 %#0000 0000 0000 1000 1000 1000 0000 %0809 j09 %N2 6 \$
%z009711 -00070 000220 %#1000 1000 1000 0000 0000 0000 0000 %0729 b01 %W2 7 \$
%\$

%BEG HE21.22.TXT, Separation cmy0*, D50, not adapted S												%100 x LAB*												1000 x (r g b												c m y 0)												%nr.												pos \$											
002373	000051	-00127	0000	0000	0000	1000	1000	1000	0000	0000	0000	%0972	k01	\$	000393	000050	000320	0866	0866	0866	0133	0133	0133	0000	0000	0000	%1053	m23	\$																																										
002778	000217	000088	0125	0125	0125	0875	0875	0875	0000	0000	0000	%0973	k02	\$	000902	-00004	000235	0933	0933	0933	0066	0066	0066	0000	0000	0000	%1054	m24	\$																																										
003576	000411	000114	0250	0250	0250	0750	0750	0750	0000	0000	0000	%0974	k03	\$	000694	-00063	000220	1000	1000	1000	0000	0000	0000	0000	0000	0000	%1055	m25	\$																																										
004362	000315	000230	0375	0375	0375	0625	0625	0625	0000	0000	0000	%0975	k04	\$	002636	000029	-00180	0000	0000	0000	0000	1000	1000	1000	0000	0000	%1056	n10	\$																																										
005398	000273	000331	0500	0500	0500	0500	0500	0500	0000	0000	0000	%0976	k05	\$	002852	000153	-00064	0066	0066	0066	0066	0933	0933	0933	0000	0000	%1057	n11	\$																																										
006484	000298	000248	0625	0625	0625	0375	0375	0375	0000	0000	0000	%0977	k06	\$	003049	000227	000079	0133	0133	0133	0866	0866	0866	0000	0000	0000	%1058	n12	\$																																										
007514	000304	000275	0750	0750	0750	0250	0250	0250	0000	0000	0000	%0978	k07	\$	003424	000316	000079	0200	0200	0200	0800	0800	0800	0000	0000	0000	%1059	n13	\$																																										
008644	000061	000207	0875	0875	0875	0125	0125	0125	0000	0000	0000	%0979	k08	\$	003785	000423	000102	0266	0266	0266	0333	0333	0333	0000	0000	0000	%1060	n14	\$																																										
009709	-00081	000212	1000	1000	1000	0000	0000	0000	0000	0000	0000	%0980	k09	\$	004218	000382	000166	0333	0333	0333	0666	0666	0666	0000	0000	0000	%1061	n15	\$																																										
002418	000043	000129	0000	0000	0000	1000	1000	1000	0000	0000	0000	%0981	l01	\$	004628	000370	000269	0400	0400	0400	0600	0600	0600	0000	0000	0000	%1062	n16	\$																																										
002807	000210	000071	0125	0125	0125	0875	0875	0875	0000	0000	0000	%0982	l02	\$	005214	000360	000311	0466	0466	0466	0533	0533	0533	0000	0000	0000	%1063	n17	\$																																										
003594	000400	000099	0250	0250	0250	0750	0750	0750	0000	0000	0000	%0983	l03	\$	005683	000316	000285	0533	0533	0533	0466	0466	0466	0000	0000	0000	%1064	n18	\$																																										
004365	000299	000217	0375	0375	0375	0625	0625	0625	0000	0000	0000	%0984	l04	\$	006263	000335	000247	0600	0600	0600	0400	0400	0400	0000	0000	0000	%1065	n19	\$																																										
005413	000268	000310	0500	0500	0500	0500	0500	0500	0000	0000	0000	%0985	l05	\$	006769	000309	000296	0666	0666	0666	0333	0333	0333	0000	0000	0000	%1066	n20	\$																																										
006544	000295	000244	0625	0625	0625	0375	0375	0375	0000	0000	0000	%0986	l06	\$	007311	000338	000323	0734	0734	0734	0266	0266	0266	0000	0000	0000	%1067	n21	\$																																										
007586	000307	000281	0750	0750	0750	0250	0250	0250	0000	0000	0000	%0987	l07	\$	007797	000238	000295	0800	0800	0800	0200	0200	0200	0000	0000	0000	%1068	n22	\$																																										
008624	000089	000222	0875	0875	0875	0125	0125	0125	0000	0000	0000	%0988	l08	\$	008330	000062	000325	0866	0866	0866	0133	0133	0133	0000	0000	0000	%1069	n23	\$																																										
009699	-00077	000215	1000	1000	1000	0000	0000	0000	0000	0000	0000	%0989	l09	\$	008993	-00041	000223	0933	0933	0933	0066	0066	0066	0000	0000	0000	%1070	n24	\$																																										
002342	000027	-00123	0000	0000	0000	0000	1000	1000	0000	0000	0000	%0990	m01	\$	009688	-00065	000206	1000	1000	1000	0000	0000	0000	0000	0000	0000	%1071	n25	\$																																										
002782	000207	000077	0125	0125	0125	0875	0875	0875	0000	0000	0000	%0991	m02	\$	002397	000025	-00172	0000	0000	0000	0000	1000	1000	1000	0000	0000	%1072	k26	\$																																										
003571	000395	000098	0250	0250	0250	0750	0750	0750	0000	0000	0000	%0992	m03	\$	009721	-00071	000208	1000	1000	1000	0000	0000	0000	0000	0000	0000	%1073	k27	\$																																										
004313	000291	000234	0375	0375	0375	0625	0625	0625	0000	0000	0000	%0993	m04	\$	004475	000423	003078	1000	0000	0000	0000	0000	0000	1000	1000	0000	%1074	l26	\$																																										
005335	000255	000333	0500	0500	0500	0500	0500	0500	0000	0000	0000	%0994	m05	\$	005506	-05066	-01957	0000	1000	1000	1000	1000	0000	0000	0000	0000	%1075	l27	\$																																										
006481	000272	000250	0625	0625	0625	0375	0375	0375	0000	0000	0000	%0995	m06	\$	008941	-00400	008088	1000	1000	0000	0000	0000	0000	1000	0000	0000	%1076	m26	\$																																										
007537	000274	000298	0750	0750	0750	0250	0250	0250	0000	0000	0000	%0996	m07	\$	004343	-02005	-05176	0000	0000	1000	1000	1000	1000	0000	0000	0000	%1077	m27	\$																																										
008651	000061	000230	0875	0875	0875	0125	0125	0125	0000	0000	0000	%0997	m08	\$	005322	-00571	002156	0000	1000	0000	0000	0000	0000	1000	0000	0000	%1078	n26	\$																																										
009722	-00083	000225	1000	1000	1000	0000	0000	0000	0000	0000	0000	%0998	m09	\$	003162	004566	-02904	1000	0000	1000	0000	0000	1000	0000	0000	0000	%1079	n27	\$																																										
002306	000027	-00114	0000	0000	0000	0000	1000	1000	0000	0000	0000	%0999	n01	\$	%\$																																																								
002803	000203	000097	0125	0125	0125	0875	0875	0875	0000	0000	0000	%1000	n02	\$	%004475	006423	003078	%#1000	0000	0000	0000	0000	1000	1000	0000	0000	%1074	l26	%03	0	\$																																								
003603	000382	000122	0250	0250	0250	0750	0750	0750	0000	0000	0000	%1001	n03	\$	%008941	-00400	008088	%#1000	1000	0000	0000	0000	0000	1000	0000	0000	%1076	m26	%03	1	\$																																								
004323	000298	000258	0375	0375	0375	0625	0625	0625	0000	0000	0000	%1002	n04	\$	%005322	-00571	002156	%#0000	1000	0000	0000	1000	0000	1000	0000	0000	%1078	n26	%L3	2	\$																																								
005335	000243	000354	0500	0500	0500	0500	0500	0500	0000	0000	0000	%1003	n05	\$	%005506	-05066	-01957	%#0000	1000	1000	1000	0000	0000	0000	0000	0000	%1075	l27	%C3	3	\$																																								
006452	000275	000257	0625	0625	0625	0375	0375	0375	0000	0000	0000	%1004	n06	\$	%004343	-02005	-05176	%#0000	0000	1000	1000	1000	1000	0000	0000	0000	%1077	m27	%W3	4	\$																																								
007523	000292	000282	0750	0750	0750	0250	0250	0250	0000	0000	0000	%1005	n07	\$	%003162	004566	-02904	%#1000	0000	1000	0000	1000	1000	0000	0000	0000	%1079	n27	%M3	5	\$																																								
008660	000055	000220	0875	0875	0875	0125	0125	0125	0000	0000	0000	%1006	n08	\$	%002397	000025	-00172	%#0000	0000	0000	1000	1000	1000	1000	0000	0000	%1072	k26	%M3	6	\$																																								
009709	-00068	000194	1000	1000	1000	0000	0000	0000	0000	0000	0000	%1007	n09	\$	%009721	-00071	000208	%#1000	1000	1000	0000	0000	0000	0000	0000	0000	%1073	k27	%M3	7	\$																																								
002714	000029	-00173	0000	0000	0000	0000	1000	1000	0000	0000	0000	%1008	k10	\$	%\$																																																								
002850	000141	-00050	0066	0066	0066	0933	0933	0933	0000	0000	0000	%1009	k11	\$	%002543	000040	-00150	%#0000	0000	0000	1000	1000	1000	0000	0000	0000	%0972	k01	%N4	6	\$																																								
003084	000231	000082	0133	0133	0133	0866	0866	0866	0000	0000	0000	%1010	k12	\$	%009706	-00070	000202	%#1000	1000	1000	0000	0000	0000	0000	0000	0000	%0980	k09	%M4	7	\$																																								
003434	000308	000129	0200	0200	0200	0800	0800	0800	0000	0000	0000	%1011	k13	\$	%\$																																																								

N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

See original or copy: <http://web.me.com/klau.s.richter/HE31/HE31L0NP.PDF> /.PS
 Technical information: <http://www.ps.barn.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

003559	003035	000744	0375	0000	0000	00625	1000	1000	0000	%0243	A10	\$	003828	003880	001241	0500	0000	0000	0500	1000	1000	0000	%0324	J10	\$	004011	004639	001772	0625	0000	0000	0375	1000	1000	0000	%0405	S10	\$
003519	003282	-00083	0375	0000	0125	0625	1000	0875	0000	%0244	A11	\$	003772	004161	000370	0500	0000	0125	0500	1000	0875	0000	%0325	J11	\$	003910	004791	000680	0625	0000	0125	0375	1000	0875	0000	%0406	S11	\$
003427	003067	-00838	0375	0000	0250	0625	1000	0750	0000	%0245	A12	\$	003682	004226	-00400	0500	0000	0250	0500	1000	0750	0000	%0326	J12	\$	003883	004947	-00107	0625	0000	0250	0375	1000	0750	0000	%0407	S12	\$
003217	001691	-01593	0375	0000	0375	0625	1000	0625	0000	%0246	A13	\$	003585	003471	-01138	0500	0000	0375	0500	1000	0625	0000	%0327	J13	\$	003803	004995	-000826	0625	0000	0375	0375	1000	0625	0000	%0408	S13	\$
003279	001230	-02563	0375	0000	0500	0625	1000	0500	0000	%0247	A14	\$	003535	003283	-01917	0500	0000	0500	0500	1000	0500	0000	%0328	J14	\$	003575	004076	-01474	0625	0000	0500	0375	1000	0500	0000	%0409	S14	\$
003472	000798	-03398	0375	0000	0625	0625	1000	0375	0000	%0248	A15	\$	003251	002150	-02959	0500	0000	0625	0500	1000	0375	0000	%0329	J15	\$	003276	003118	-02265	0625	0000	0625	0375	1000	0375	0000	%0410	S15	\$
003575	000786	-04147	0375	0000	0750	0625	1000	0250	0000	%0249	A16	\$	003093	002237	-04045	0500	0000	0750	0500	1000	0250	0000	%0330	J16	\$	003235	003017	-03206	0625	0000	0750	0375	1000	0250	0000	%0411	S16	\$
003411	000717	-04571	0375	0000	0875	0625	1000	0125	0000	%0250	A17	\$	003106	001530	-04387	0500	0000	0875	0500	1000	0125	0000	%0331	J17	\$	002952	002940	-03725	0625	0000	0875	0375	1000	0125	0000	%0412	S17	\$
003409	000441	-04692	0375	0000	1000	0625	1000	0000	0000	%0251	A18	\$	003135	001362	-04448	0500	0000	1000	0500	1000	0000	0000	%0332	J18	\$	002933	002229	-04135	0625	0000	1000	0375	1000	0000	0000	%0413	S18	\$
003820	002260	-001583	0375	0125	0000	0625	0875	1000	0000	%0252	B10	\$	004028	003207	-001939	0500	0125	0000	0500	0875	1000	0000	%0333	K10	\$	004069	004048	-002509	0625	0125	0000	0375	0875	1000	0000	%0414	T10	\$
003961	002033	-000631	0375	0125	0125	0625	0875	0875	0000	%0253	B11	\$	004253	002831	-000965	0500	0125	0125	0500	0875	0875	0000	%0334	K11	\$	004539	003527	-001360	0625	0125	0125	0375	0875	0875	0000	%0415	T11	\$
003969	002275	-00352	0375	0125	0250	0625	0875	0750	0000	%0254	B12	\$	004208	002976	-00001	0500	0125	0250	0500	0875	0750	0000	%0335	K12	\$	004478	003669	-000551	0625	0125	0250	0375	0875	0750	0000	%0416	T12	\$
003738	001221	-00954	0375	0125	0375	0625	0875	0625	0000	%0255	B13	\$	004183	002894	-00692	0500	0125	0375	0500	0875	0625	0000	%0336	K13	\$	004463	003927	-00308	0625	0125	0375	0375	0875	0625	0000	%0417	T13	\$
003542	000641	-02229	0375	0125	0500	0625	0875	0500	0000	%0256	B14	\$	003846	001872	-01431	0500	0125	0500	0500	0875	0500	0000	%0337	K14	\$	004260	003374	-01170	0625	0125	0500	0375	0875	0500	0000	%0418	T14	\$
003963	000250	-02765	0375	0125	0625	0625	0875	0375	0000	%0257	B15	\$	003830	001478	-02525	0500	0125	0625	0500	0875	0375	0000	%0338	K15	\$	003886	002518	-01897	0625	0125	0625	0375	0875	0375	0000	%0419	T15	\$
004199	000066	-03334	0375	0125	0750	0625	0875	0250	0000	%0258	B16	\$	003893	001104	-03416	0500	0125	0750	0500	0875	0250	0000	%0339	K16	\$	003900	002164	-02876	0625	0125	0750	0375	0875	0250	0000	%0420	T16	\$
004091	000062	-04384	0375	0125	0875	0625	0875	0125	0000	%0259	B17	\$	003732	001226	-04210	0500	0125	0875	0500	0875	0125	0000	%0340	K17	\$	003508	002278	-03810	0625	0125	0875	0375	0875	0125	0000	%0421	T17	\$
003781	000039	-04636	0375	0125	1000	0625	0875	0000	0000	%0260	B18	\$	003511	001094	-04386	0500	0125	1000	0500	0875	0000	0000	%0341	K18	\$	003311	001820	-04120	0625	0125	1000	0375	0875	0000	0000	%0422	T18	\$
004264	001072	-002108	0375	0250	0000	0625	0750	1000	0000	%0261	C10	\$	004610	002092	-002501	0500	0250	0000	0500	0750	1000	0000	%0342	L10	\$	004710	003062	-003039	0625	0250	0000	0375	0750	1000	0000	%0423	U10	\$
004248	001270	-001257	0375	0250	0125	0625	0750	0875	0000	%0262	C11	\$	004546	002116	-001777	0500	0250	0125	0500	0750	0875	0000	%0343	L11	\$	004734	003141	-002331	0625	0250	0125	0375	0750	0875	0000	%0424	U11	\$
004286	001231	-000418	0375	0250	0250	0625	0750	0750	0000	%0263	C12	\$	004546	002116	-001777	0500	0250	0125	0500	0750	0875	0000	%0343	L12	\$	004734	003141	-002331	0625	0250	0125	0375	0750	0875	0000	%0424	U11	\$
004163	000736	-00340	0375	0250	0375	0625	0750	0625	0000	%0264	C13	\$	004689	001984	-00202	0500	0375	0625	0750	0750	0625	0000	%0344	L13	\$	005060	000810	-002270	0625	0375	0375	0750	0750	0500	0000	%0425	U12	\$
004093	000216	-01518	0375	0250	0500	0625	0750	0500	0000	%0265	C14	\$	004345	001278	-00943	0500	0250	0500	0500	0750	0500	0000	%0345	L14	\$	004951	002803	-00636	0625	0250	0500	0375	0750	0500	0000	%0427	U14	\$
004512	-00219	-02119	0375	0250	0625	0625	0750	0375	0000	%0266	C15	\$	004218	000761	-02144	0500	0250	0625	0500	0750	0375	0000	%0347	L15	\$	004559	001851	-01375	0625	0250	0625	0375	0750	0375	0000	%0428	U15	\$
004801	-00439	-02663	0375	0250	0750	0625	0750	0250	0000	%0267	C16	\$	004504	000525	-02733	0500	0250	0750	0500	0750	0250	0000	%0348	L16	\$	004399	001530	-02500	0625	0250	0750	0375	0750	0250	0000	%0429	U16	\$
004942	-00625	-03588	0375	0250	0875	0625	0750	0125	0000	%0268	C17	\$	004568	000254	-03885	0500	0250	0875	0500	0750	0125	0000	%0349	L17	\$	004071	001607	-03826	0625	0250	0875	0375	0750	0125	0000	%0430	U17	\$
004422	-00587	-04511	0375	0250	1000	0625	0750	0000	0000	%0269	C18	\$	004264	000313	-04278	0500	0250	1000	0500	0750	0000	0000	%0350	L18	\$	003865	001276	-04085	0625	0250	1000	0375	0750	0000	0000	%0431	U18	\$
004805	000148	-002780	0375	0375	0000	0625	0625	1000	0000	%0270	D10	\$	005136	001045	-003264	0500	0375	0000	0500	0625	1000	0000	%0351	M10	\$	005298	002076	-003935	0625	0375	0000	0375	0625	1000	0000	%0432	U19	\$
004733	000197	-001878	0375	0375	0125	0625	0625</																															

N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

004140	005606	002275	0750	0000	0000	0250	1000	1000	0000	%0486	A19	\$
004405	005683	001399	0750	0000	0125	0250	1000	0875	0000	%0487	A20	\$
004007	005689	000399	0750	0000	0250	0250	1000	0750	0000	%0488	A21	\$
003980	006038	-00511	0750	0000	0375	0250	1000	0625	0000	%0489	A22	\$
003743	005463	-01168	0750	0000	0500	0250	1000	0500	0000	%0490	A23	\$
003345	004572	-01849	0750	0000	0625	0250	1000	0375	0000	%0491	A24	\$
003015	003922	-02540	0750	0000	0750	0250	1000	0250	0000	%0492	A25	\$
002814	003627	-03255	0750	0000	0875	0250	1000	0125	0000	%0493	A26	\$
002872	003148	-03756	0750	0000	1000	0250	1000	0000	0000	%0494	A27	\$
002421	002564	-04329	0750	0125	0000	0250	0875	1000	0000	%0495	B10	\$
004769	004388	-001915	0750	0125	0125	0250	0875	0875	0000	%0496	B20	\$
004700	004512	-001083	0750	0125	0250	0250	0875	0750	0000	%0497	B21	\$
004674	004879	-000127	0750	0125	0375	0250	0875	0625	0000	%0498	B22	\$
004465	005097	-00780	0750	0125	0500	0250	0875	0500	0000	%0499	B23	\$
004061	004129	-01554	0750	0125	0625	0250	0875	0375	0000	%0500	B24	\$
003717	003226	-02232	0750	0125	0750	0250	0875	0250	0000	%0501	B25	\$
003415	003454	-03405	0750	0125	0875	0250	0875	0125	0000	%0502	B26	\$
003251	002772	-03801	0750	0125	1000	0250	0875	0000	0000	%0503	B27	\$
004922	004305	-004215	0750	0250	0000	0250	0750	1000	0000	%0504	C19	\$
004919	004032	-002861	0750	0250	0125	0250	0750	0875	0000	%0505	C20	\$
005421	003222	-001524	0750	0250	0250	0250	0750	0750	0000	%0506	C21	\$
005346	003416	-000688	0750	0250	0375	0250	0750	0625	0000	%0507	C22	\$
005233	003849	-00342	0750	0250	0500	0250	0750	0500	0000	%0508	C23	\$
004778	003463	-01218	0750	0250	0625	0250	0750	0375	0000	%0509	C24	\$
004305	002564	-01885	0750	0250	0750	0250	0750	0250	0000	%0510	C25	\$
004069	002742	-03425	0750	0250	0875	0250	0750	0125	0000	%0511	C26	\$
003656	002195	-03905	0750	0250	1000	0250	0750	0000	0000	%0512	C27	\$
005504	003121	-005085	0750	0375	0000	0250	0625	1000	0000	%0513	D19	\$
005631	002734	-003272	0750	0375	0125	0250	0625	0875	0000	%0514	D20	\$
005580	002922	-002415	0750	0375	0250	0250	0625	0750	0000	%0515	D21	\$
005914	002296	-001416	0750	0375	0375	0250	0625	0625	0000	%0516	D22	\$
005877	002678	-000246	0750	0375	0500	0250	0625	0500	0000	%0517	D23	\$
005583	002743	-00683	0750	0375	0625	0250	0625	0375	0000	%0518	D24	\$
004990	002600	-01367	0750	0375	0750	0250	0625	0250	0000	%0519	D25	\$
004821	002011	-03022	0750	0375	0875	0250	0625	0125	0000	%0520	D26	\$
004448	001317	-03745	0750	0375	1000	0250	0625	0000	0000	%0521	D27	\$
006062	002195	-005944	0750	0500	0000	0250	0500	1000	0000	%0522	E19	\$
006242	001739	-003788	0750	0500	0125	0250	0500	0875	0000	%0523	E20	\$
006219	001782	-002966	0750	0500	0250	0250	0500	0750	0000	%0524	E21	\$
006244	001760	-002235	0750	0500	0375	0250	0500	0625	0000	%0525	E22	\$
006355	001664	-001214	0750	0500	0500	0250	0500	0500	0000	%0526	E23	\$
006252	002107	-001236	0750	0500	0625	0250	0500	0375	0000	%0527	E24	\$
005646	001484	-01084	0750	0500	0750	0250	0500	0250	0000	%0528	E25	\$
005607	000995	-02489	0750	0500	0875	0250	0500	0125	0000	%0529	E26	\$
005579	000501	-03277	0750	0500	1000	0250	0500	0000	0000	%0530	E27	\$
006521	001207	-006418	0750	0625	0000	0250	0375	1000	0000	%0531	F19	\$
006786	000888	-004399	0750	0625	0125	0250	0375	0875	0000	%0532	F20	\$
006805	000843	-003510	0750	0625	0250	0250	0375	0750	0000	%0533	F21	\$
006771	000870	-002863	0750	0625	0375	0250	0375	0625	0000	%0534	F22	\$
006738	000922	-002016	0750	0625	0500	0250	0375	0500	0000	%0535	F23	\$
006755	000989	-000828	0750	0625	0625	0250	0375	0375	0000	%0536	F24	\$
006451	000900	-00574	0750	0625	0750	0250	0375	0250	0000	%0537	F25	\$
006441	000400	-01849	0750	0625	0875	0250	0375	0125	0000	%0538	F26	\$
006984	-00383	-02605	0750	0625	1000	0250	0375	0000	0000	%0539	F27	\$
007409	000136	-007277	0750	0750	0000	0250	0250	1000	0000	%0540	G19	\$
007436	000066	-005287	0750	0750	0125	0250	0250	0875	0000	%0541	G20	\$
007428	000051	-004183	0750	0750	0250	0250	0250	0750	0000	%0542	G21	\$
007374	000021	-003414	0750	0750	0375	0250	0250	0500	0000	%0543	G22	\$
007326	000079	-002615	0750	0750	0500	0250	0250	0500	0000	%0544	G23	\$
007337	000060	-001585	0750	0750	0625	0250	0250	0375	0000	%0545	G24	\$
007290	000365	-000399	0750	0750	0750	0250	0250	0250	0000	%0546	G25	\$
007518	-00281	-00966	0750	0750	0875	0250	0250	0125	0000	%0547	G26	\$
008369	-01069	-01645	0750	0750	1000	0250	0250	0000	0000	%0548	G27	\$
008665	-00706	-006454	0750	0750	0000	0250	0125	1000	0000	%0549	H19	\$
008290	-00821	-006550	0750	0750	0125	0250	0125	0875	0000	%0550	H20	\$
008177	-00865	-004987	0750	0750	0250	0250	0125	0750	0000	%0551	H21	\$
008113	-01027	-004111	0750	0750	0375	0250	0125	0625	0000	%0552	H22	\$
008017	-01076	-003149	0750	0750	0500	0250	0125	0500	0000	%0553	H23	\$
007867	-01045	-002058	0750	0750	0625	0250	0125	0375	0000	%0554	H24	\$
007907	-00836	-000563	0750	0750	0875	0750	0250	0125	0000	%0555	H25	\$
007979	-00949	-00371	0750	0750	0875	0250	0125	0125	0000	%0556	H26	\$
008410	-01252	-01604	0750	0750	1000	0250	0125	0000	0000	%0557	H27	\$
008850	-01694	-008414	0750	1000	0000	0250	0000	1000	0000	%0558	I19	\$
008705	-01746	-006948	0750	1000	0125	0250	0000	0875	0000	%0559	I20	\$
008660	-01873	-005359	0750	1000	0250	0250	0000	0750	0000	%0560	I21	\$
008487	-02035	-004474	0750	1000	0375	0250	0000	0625	0000	%0561	I22	\$
008422	-02057	-003373	0750	1000	0500	0250	0000	0500	0000	%0562	I23	\$
008402	-01959	-002119	0750	1000	0625	0250	0000	0375	0000	%0563	I24	\$
008656	-01514	-008015	0750	1000	0750	0250	0000	0250	0000	%0564	I25	\$
008507	-01499	-001719	0750	1000	0875	0250	0000	0125	0000	%0565	I26	\$
008425	-01340	-01251	0750	1000	1000	0250	0000	0000	0000	%0566	I27	\$
004465	006177	002580	0875	0000	0000	0125	1000	1000	0000	%0567	J19	\$
004406	006259	001868	0875	0000	0125	0125	1000	0875	0000	%0568	J20	\$
004374	006440	000874	0875	0000	0250	0125	1000	0750	0000	%0569	J21	\$
004340	006624	-00068	0875	0000	0375	0125	1000	0625	0000	%0570	J22	\$
004227	006312	-00988	0875	0000	0500	0125	1000	0500	0000	%0571	J23	\$
003834	005683	-01485	0875	0000	0625	0125	1000	0375	0000	%0572	J24	\$
003404	004900	-02129	0875	0000	0750	0125	1000	0250	0000	%0573	J25	\$
003300	004223	-02729	0875	0000	1000	0125	1000	0125	0000	%0574	J26	\$
003297	003941	-03218	0875	0000	1000	0125	1000	0000	0000	%0575	J27	\$
004505	006041	003586	0875	0125	0000	0125	0875	1000	0000	%0576	K19	\$
005085	005388	002427	0875	0125	0125	0125	0875	0875	0000	%0577	K20	\$
004990	005658	001544	0875	0125	0250	0125	0875	0750	0000	%0578	K21	\$
004954	005959	000468	0875	0125	0375	0125	0875	0625	0000	%0579	K22	\$
004854	006174	-00670	0875	0125	0500	0125	0875	0500	0000	%0580	K23	\$
004491	005410	-01319	0875	0125	0625	0125	0875	0375	0000	%0581	K24	\$
004116	004853	-01958	0875	0125	0750	0125	0875	0250	0000	%0582	K25	\$
003732	004132	-02738	0875	0125	0875	0125	0875	0125	0000	%0583	K26	\$
003435	003563	-03370	0875	0125	1000	0125	0875	0000	0000	%0584	K27	\$
005077	005409	004900	0875	0250	0000	0125	0750	1000	0000	%0585	L19	\$
005146	005282	003893	0875	0250	0125	0125	0750					

N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

See original or copy: <http://web.me.com/klaus.richter/HE31/HE31L0NP.PDF> /.PS
 Technical information: <http://www.ps.bam.de> V 2.1, io=1,1, Cx=0; cfi=1.00; nt=0.18; nx=1.0

009712	-00002	000001	1000	1000	1000	0000	0000	0000	0000	%0729	b01	\$
009023	-00787	-00714	0875	1000	1000	0125	0000	0000	0000	%0730	b02	\$
008543	-01180	-01177	0750	1000	1000	0250	0000	0000	0000	%0731	b03	\$
007951	-01741	-01546	0625	1000	1000	0375	0000	0000	0000	%0732	b04	\$
007342	-02234	-01961	0500	1000	1000	0500	0000	0000	0000	%0733	b05	\$
006819	-02741	-02233	0375	1000	1000	0625	0000	0000	0000	%0734	b06	\$
006245	-03448	-02259	0250	1000	1000	0750	0000	0000	0000	%0735	b07	\$
005730	-04079	-02465	0125	1000	1000	0875	0000	0000	0000	%0736	b08	\$
005458	-04392	-02501	0000	1000	1000	0900	0000	0000	0000	%0737	b09	\$
005197	000612	000489	1000	0875	0875	0000	0125	0125	0000	%0738	c01	\$
008527	000107	000121	0875	0875	0875	0125	0125	0125	0000	%0739	c02	\$
008174	-00835	-00407	0750	0875	0875	0250	0125	0125	0000	%0740	c03	\$
007719	-01283	-00771	0625	0875	0875	0375	0125	0125	0000	%0741	c04	\$
007194	-02090	-01406	0500	0875	0875	0500	0125	0125	0000	%0742	c05	\$
006747	-02557	-01652	0375	0875	0875	0625	0125	0125	0000	%0743	c06	\$
006266	-03204	-01760	0250	0875	0875	0750	0125	0125	0000	%0744	c07	\$
005869	-04098	-01970	0125	0875	0875	0875	0125	0125	0000	%0745	c08	\$
005362	-04688	-02255	0000	0875	0875	1000	0125	0125	0000	%0746	c09	\$
004841	001336	000749	1000	0750	0750	0000	0250	0250	0000	%0747	d01	\$
007458	000908	000617	0875	0750	0750	0125	0250	0250	0000	%0748	d02	\$
007483	0000331	000188	0750	0750	0750	0250	0250	0250	0000	%0749	d03	\$
007041	-00447	-00294	0625	0750	0750	0375	0250	0250	0000	%0750	d04	\$
006675	-01404	-00766	0500	0750	0750	0500	0250	0250	0000	%0751	d05	\$
006209	-01972	-01338	0375	0750	0750	0625	0250	0250	0000	%0752	d06	\$
005756	-02582	-01534	0250	0750	0750	0750	0250	0250	0000	%0753	d07	\$
005463	-03534	-01783	0125	0750	0750	0875	0250	0250	0000	%0754	d08	\$
005202	-05118	-02094	0000	0750	0750	1000	0250	0250	0000	%0755	d09	\$
008043	002091	001132	1000	0625	0625	0000	0375	0375	0000	%0756	e01	\$
007450	001488	001065	0875	0625	0625	0125	0375	0375	0000	%0757	e02	\$
006965	000995	000638	0750	0625	0625	0250	0375	0375	0000	%0758	e03	\$
006421	000337	000201	0625	0625	0625	0375	0375	0375	0000	%0759	e04	\$
006047	-00314	-00162	0500	0625	0625	0500	0375	0375	0000	%0760	e05	\$
005698	-01345	-00885	0375	0625	0625	0625	0375	0375	0000	%0761	e06	\$
005304	-02080	-01213	0250	0625	0625	0750	0375	0375	0000	%0762	e07	\$
004913	-02816	-01529	0125	0625	0625	0875	0375	0375	0000	%0763	e08	\$
004863	-04699	-01863	0000	0625	0625	1000	0375	0375	0000	%0764	e09	\$
007427	002880	001839	1000	0500	0500	0000	0500	0500	0000	%0765	f01	\$
006929	002159	001544	0875	0500	0500	0125	0500	0500	0000	%0766	f02	\$
006431	001617	001127	0750	0500	0500	0250	0500	0500	0000	%0767	f03	\$
005966	001081	000612	0625	0500	0500	0375	0500	0500	0000	%0768	f04	\$
005438	000247	000360	0500	0500	0500	0500	0500	0500	0000	%0769	f05	\$
005096	-00320	-00070	0375	0500	0500	0625	0500	0500	0000	%0770	f06	\$
004751	-01441	-00798	0250	0500	0500	0750	0500	0500	0000	%0771	f07	\$
004561	-02255	-01081	0125	0500	0500	0875	0500	0500	0000	%0772	f08	\$
004283	-03260	-01333	0000	0500	0500	1000	0500	0500	0000	%0773	f09	\$
006560	004275	002262	1000	0375	0375	0000	0625	0625	0000	%0774	g01	\$
006307	003156	001852	0875	0375	0375	0125	0625	0625	0000	%0775	g02	\$
005865	002254	001438	0750	0375	0375	0250	0625	0625	0000	%0776	g03	\$
005454	001730	001017	0625	0375	0375	0375	0625	0625	0000	%0777	g04	\$
004993	001039	000505	0500	0375	0375	0500	0625	0625	0000	%0778	g05	\$
004538	000266	000272	0375	0375	0375	0625	0625	0625	0000	%0779	g06	\$
004251	-00387	-00040	0250	0375	0375	0750	0625	0625	0000	%0780	g07	\$
004012	-01516	-00575	0125	0375	0375	0875	0625	0625	0000	%0781	g08	\$
003898	-02350	-00901	0000	0375	0375	1000	0625	0625	0000	%0782	g09	\$
005885	005423	002810	1000	0250	0250	0000	0750	0750	0000	%0783	h01	\$
005703	004071	002189	0875	0250	0250	0125	0750	0750	0000	%0784	h02	\$
005317	003209	001561	0750	0250	0250	0250	0750	0750	0000	%0785	h03	\$
004881	002568	001191	0625	0250	0250	0375	0750	0750	0000	%0786	h04	\$
004491	001793	000761	0500	0250	0250	0500	0750	0750	0000	%0787	h05	\$
004162	001253	000411	0375	0250	0250	0625	0750	0750	0000	%0788	h06	\$
003814	000389	000174	0250	0250	0250	0750	0750	0750	0000	%0789	h07	\$
003756	-00491	-00117	0125	0250	0250	0875	0750	0750	0000	%0790	h08	\$
003516	-01691	-00586	0000	0250	0250	1000	0750	0750	0000	%0791	h09	\$
005133	006802	003141	1000	0125	0125	0000	0875	0875	0000	%0792	i01	\$
004988	005278	002551	0875	0125	0125	0125	0875	0875	0000	%0793	i02	\$
004623	004307	001996	0750	0125	0125	0250	0875	0875	0000	%0794	i03	\$
004307	003591	001462	0625	0125	0125	0375	0875	0875	0000	%0795	i04	\$
004031	002812	001007	0500	0125	0125	0500	0875	0875	0000	%0796	i05	\$
003826	001980	000643	0375	0125	0125	0625	0875	0875	0000	%0797	i06	\$
003504	001349	000237	0250	0125	0125	0750	0875	0875	0000	%0798	i07	\$
003064	000198	000199	0125	0125	0125	0875	0875	0875	0000	%0799	i08	\$
003180	-00601	-00104	0000	0125	0125	1000	0875	0875	0000	%0800	i09	\$
004565	006492	002985	1000	0000	0000	0000	1000	1000	0000	%0801	j01	\$
004321	006090	002781	0875	0000	0000	0125	1000	1000	0000	%0802	j02	\$
003977	005571	002485	0750	0000	0000	0250	1000	1000	0000	%0803	j03	\$
003755	004804	001926	0625	0000	0000	0375	1000	1000	0000	%0804	j04	\$
003633	003837	001257	0500	0000	0000	0500	1000	1000	0000	%0805	j05	\$
003403	003042	000823	0375	0000	0000	0625	1000	1000	0000	%0806	j06	\$
003175	002153	000417	0250	0000	0000	0750	1000	1000	0000	%0807	j07	\$
002906	001105	000155	0125	0000	0000	0875	1000	1000	0000	%0808	j08	\$
002696	000004	-00015	0000	0000	0000	1000	1000	1000	0000	%0809	j09	\$
009713	000001	-00003	1000	1000	1000	0000	0000	0000	0000	%0810	b10	\$
009008	-00551	-00890	0875	0875	0875	0125	0125	0125	0000	%0811	b11	\$
008489	-00982	-01517	0750	0750	0750	0250	0250	0250				

%BEG HE21_22.TXT, Separation cmy0*, D50, adapted \$
%100 x LAB*a %1000 x (r g b c m y 0) %nr. pos \$
%z004700 006414 002801 %#1000 0000 0000 0000 1000 1000 0000 %0648 S19 %01 0 \$
%z008993 -00386 007516 %#1000 1000 0000 0000 0000 1000 0000 %0720 a19 %Y1 1 \$
%z005412 -06312 002053 %#0000 1000 0000 1000 0000 1000 0000 %0072 I01 %L1 2 \$
%z005554 -04568 -02340 %#0000 1000 1000 1000 0000 0000 0000 %0080 I09 %C1 3 \$
%z004506 -01897 -05006 %#0000 0000 1000 1000 1000 0000 0000 %0008 A09 %V1 4 \$
%z003297 004468 -02633 %#1000 0000 1000 0000 1000 0000 0000 %0656 S27 %M1 5 \$
%z002466 000000 000000 %#0000 0000 0000 1000 1000 1000 0000 %0000 A01 %N1 6 \$
%z009707 000000 000000 %#1000 1000 1000 0000 0000 0000 0000 %0728 a27 %W1 7 \$
%\$
%z004565 006492 002985 %#1000 0000 0000 0000 1000 1000 0000 %0801 j01 %02 0 \$
%z009000 -00395 007599 %#1000 1000 0000 0000 0000 1000 0000 %0882 j10 %Y2 1 \$
%z005388 -06236 001794 %#0000 1000 0000 1000 0000 1000 0000 %0963 j19 %L2 2 \$
%z005458 -04392 -02501 %#0000 1000 1000 1000 0000 0000 0000 %0737 b09 %C2 3 \$
%z004430 -01965 -05015 %#0000 0000 1000 1000 1000 0000 0000 %0818 b18 %V2 4 \$
%z003262 004439 -02594 %#1000 0000 1000 0000 1000 0000 0000 %0899 b27 %M2 5 \$
%z002597 000000 000000 %#0000 0000 0000 1000 1000 1000 0000 %0809 j09 %N2 6 \$
%z009711 000000 000000 %#1000 1000 1000 0000 0000 0000 0000 %0729 b01 %W2 7 \$
%\$

