




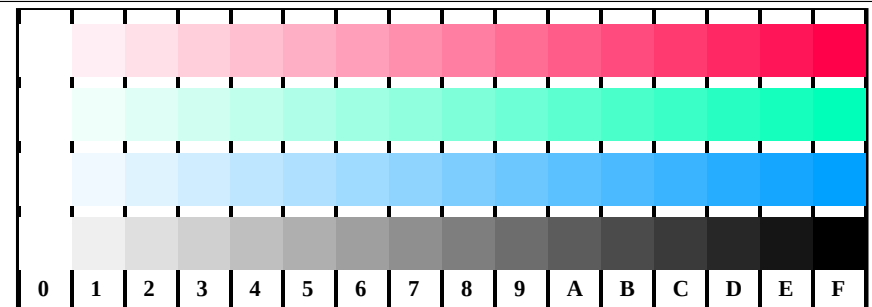

AN161-1, Figur D4Wde: 16 equidistant steps W-Re; W-Ge; W-BE; W-N; $rgb/cmy0 \rightarrow rgb_{de}$ setrgbcolor

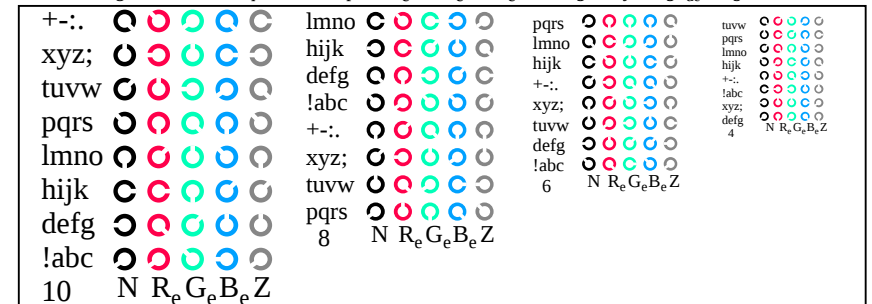

AN161-3, Figur D5Wde: Script Landoltringer N; Re; Ge; Be; Z; PS operator: $rgb \rightarrow rgb_{de}$ setrgbcolor

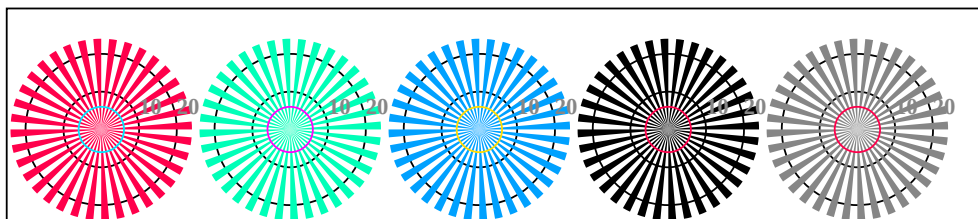

Siemens-stjerner W-Re Siemens-stjerner W-Ge Siemens-stjerner W-BE Siemens-stjerner W-N Siemens-stjerner W-Z


AN160-5, Figur D2Wde: Siemens-stjerner W-Re; W-Ge; W-BE; W-N; PS operator: $rgb \rightarrow rgb_{de}$ setrgbcolor




AN160-7, Figur D3Wde: 14 CIE-test colours and 2 + 16 grey steps (sf); $rgb/cmy0 \rightarrow rgb_{de}$ setrgbcolor



Prøveplansje AN16 infølge Prøveplansje 4 ISO/IEC 15775
kromatisk prøveplansje RGB

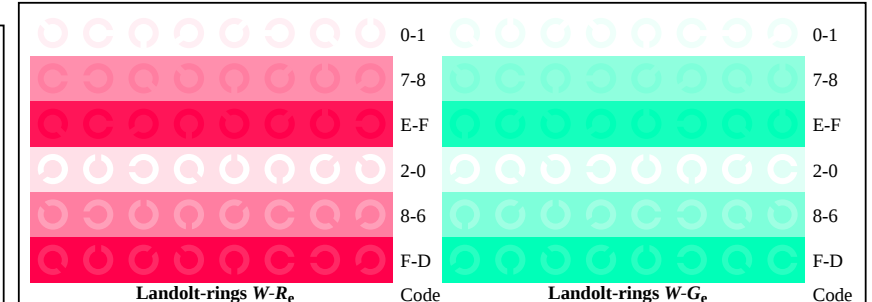

AN161-5, Figur D6Wde: Landoltringer W-Re; W-Ge; W-BE; W-N; PS operator: $rgb \rightarrow rgb_{de}$ setrgbcolor

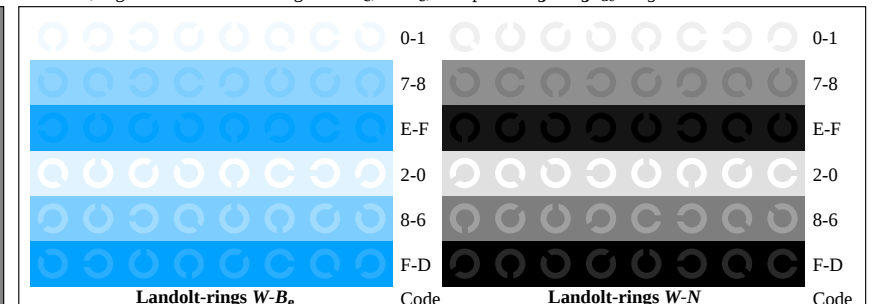

AN161-7, Figur D7Wde: Landoltringer W-Re; W-Ge; W-BE; W-N; PS operator: $rgb \rightarrow rgb_{de}$ setrgbcolor

input: $rgb/cmy0/000n/w$ set...
output: $\rightarrow rgb_{de}$ setrgbcolor

