

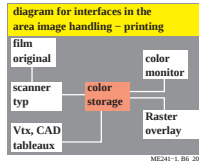
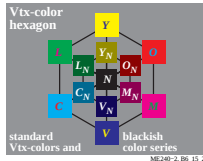
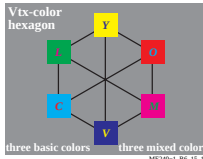
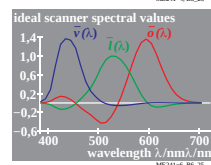
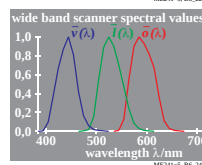
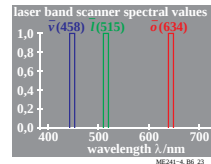
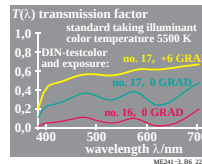


http://130.149.60.45/~farbmatrik/ME24/ME24L0N1.TXT /PS; start output
N: No Output Linearization (OL) data in File (F), Startup (S) or Device (D)

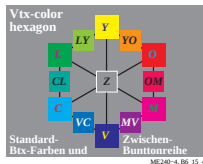

From film original to the printing-reproduction, influence parameters:


film material: Agfa, Fuji, Kodak
exposure: -6GRAD, 0GRAD, +6GRAD
taking illuminant: 3200K, 5500K, 7700K
scanner typ: wide band, laser, ...
scanner adjustment: empty window, film base, DIN-test color no. 16 / 17
profile transformation: quadratic reproduction model: raster enhancement
printing colors: Euro scale, ...

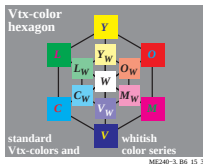

program change
BAM-home page

1 rem BAM-Btx-Leitseite
2 rem Bildänderung
3 send *65100#
4 print at(5,3) "Koll.Farbgraphik"
5 print at(5,14) "19.2.86,15h,BAM"
6 stop

ME240-7, B6_18

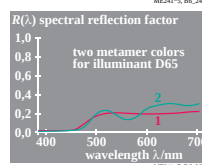

Farbwiedergabe-Index R_i der metameren BAM-Scanner-Testfarbe

Scanner	TF	Farbwiedergabe-Index	Farbabstand
Breitband	1	82	3
	2	84	
Laser	1	63	10
	2	69	
idealer	1	100	0
	2	100	

D55, Farbjustierung leeres Bildfenster

ME241-8, B6_27

TUB-test chart ME24; Richter: Computer graphics, colorimetry
Colour book series: Colour order and reproduction no. 6

input: cmyk setcmykcolor
output: no colour data change

TUB registration: 20101101-ME24/ME24L0N1.TXT /PS
application for measurement of printer or monitor systems

TUB material: code=rha4a