

Input og output: Offset-Reflektiv-System ORS18a for relativ CIELAB fargetone $h_{ab,a,rel} = h_{ab}/360 = 92/360 = 0.25$


Data for ethvert apparat (d) eller
elementærfarge (e):

HIC^*_e

fargetonetekst for fargene
på denne siden:

$H^*_e = Y00G_e$

trekantslyshet T^*

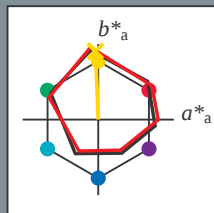

ORS20a; adapterte (a) CIELAB data					
navn	$L^*=L^*_a$	a^*_a	b^*_a	$C^*_{ab,a}$	$h^*_{ab,a}$
R _e ,Ma	45.6	72.2	34.4	80.0	25
Y _e ,Ma	83.6	-3.6	90.4	90.4	92
G _e ,Ma	50.6	-62.1	19.9	65.2	162
C _e ,Ma	55.0	-36.2	-27.2	45.3	216
B _e ,Ma	40.2	1.2	-40.6	40.6	271
M _e ,Ma	31.1	47.7	-29.1	55.9	328
N _e ,Ma	24.3	0.0	0.0	0.0	0
W _e ,Ma	95.6	0.0	0.0	0.0	0
R _e ,CIE	39.9	58.7	27.9	65.0	25
Y _e ,CIE	81.2	-2.8	71.5	71.6	92
G _e ,CIE	52.2	-42.4	13.6	44.5	162
B _e ,CIE	30.5	1.4	-46.4	46.4	271

Data for maksimalfarge (Ma):

$LabCh^*_{e,Ma}$: 83 -3 90 90 92

$HIC^*_{e,Ma}$: Y00G_100_100_e

$rgbic^*_{e,Ma}$:

1.0 0.87 0.0 1.0 1.0

trekantslyshet T^*

%Omfang



$u^*_{rel} = 92$

%Regularitet

$g^*_{H,rel} = 57$

$g^*_{C,rel} = 58$

ORS20a; adapterte (a) CIELAB data					
H^*_e	$L^*=L^*_a$	a^*_a	b^*_a	$C^*_{ab,a}$	$h^*_{ab,a}$
R00Y_100_100 _e	45.6	72.2	34.4	80.0	25
R25Y_100_100 _e	50.5	59.2	51.6	78.6	41
R50Y_100_100 _e	60.2	38.2	63.4	74.1	58
R75Y_100_100 _e	70.9	17.9	75.9	77.9	76
Y00G_100_100 _e	83.6	-3.6	90.4	90.4	92
Y25G_100_100 _e	74.5	-25.0	74.3	78.4	108
Y50G_100_100 _e	62.6	-40.9	53.8	67.6	127
Y75G_100_100 _e	54.1	-55.5	37.5	67.0	145
G00B_100_100 _e	50.6	-62.1	19.9	65.2	162
G25B_100_100 _e	53.0	-48.6	-8.2	49.2	189
G50B_100_100 _e	55.0	-36.2	-27.2	45.3	216
G75B_100_100 _e	53.3	-19.8	-41.3	45.9	244
B00R_100_100 _e	40.2	1.2	-40.6	40.6	271
B25R_100_100 _e	28.1	23.4	-40.3	46.7	300
B50R_100_100 _e	31.1	47.7	-29.1	55.9	328
B75R_100_100 _e	41.4	70.4	-9.8	71.1	352

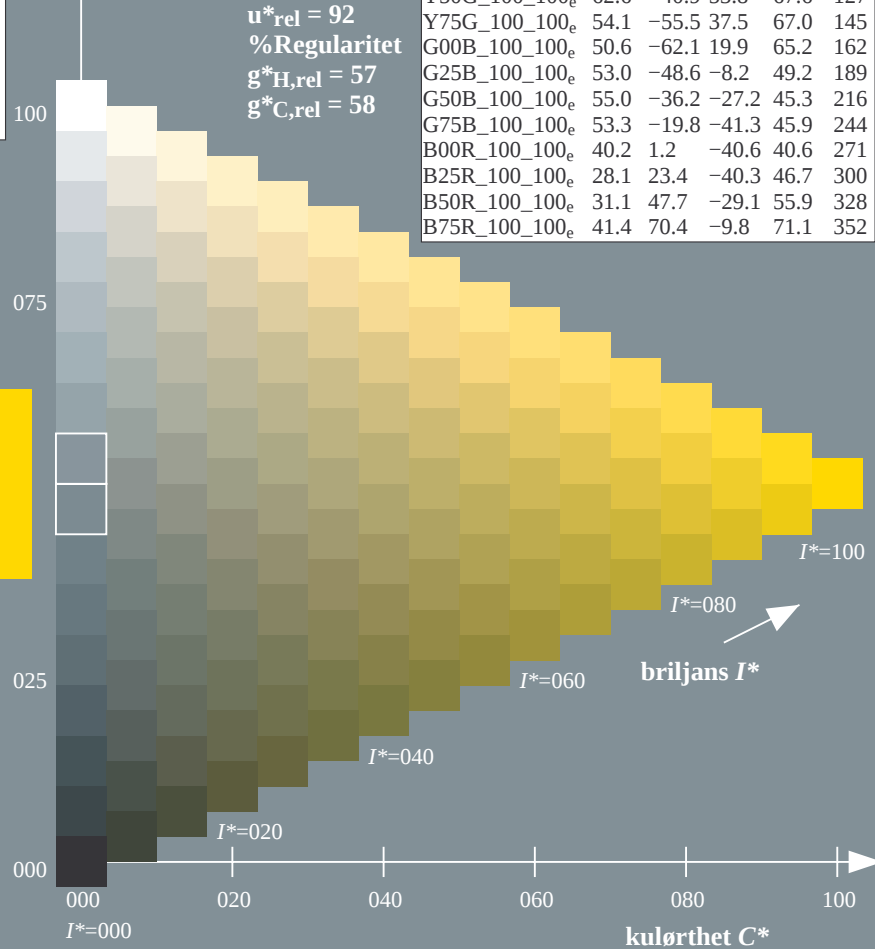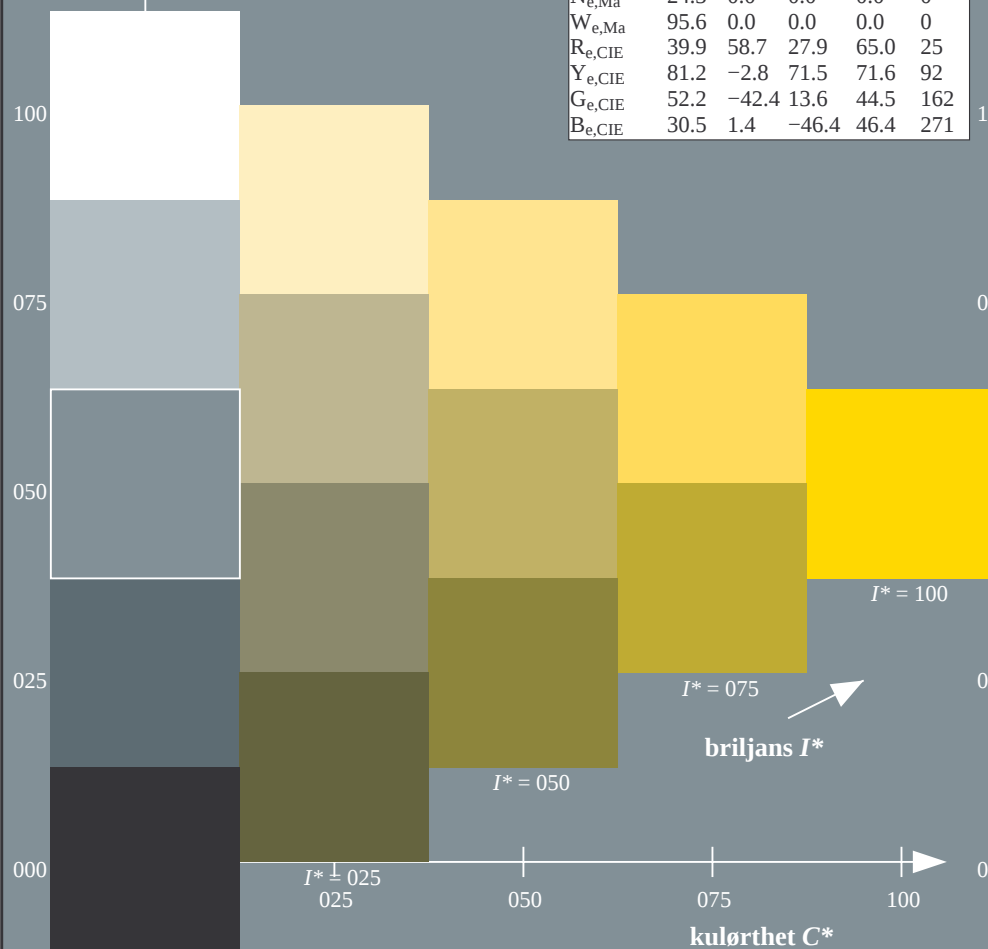

5-113131-L0 QN360-73

TUB-prøveplansje QN36; farbetoneplan: $H^*_e=Y00G_e$
prøveplansje infølge DIN 33872, 3D=1, de=1, $cmY0^*$

input: $rgb/cmyk \rightarrow rgb_{de}$
output: 3D-linearisering til $cmY0^*_{de}$

TUB registrering: 20150701-QN36/QN36L0FP.PDF /.PS

TUB-material: code=rha4ta

anvendelse for måling av offsettrykk output, separasjon $cmY0^*$ (CMY0)