


Input og output: Printer-Reflektiv-System FRS06a for relativ CIELAB fargetone $h_{ab,a,rel} = h_{ab}/360 = 290/360 = 0.8$

$H^*_d = B00R_d$

Data for ethvert apparat (d) eller elementærfarge (e):

HIC^*_d
fargetonetekst for fargene på denne siden:
 $H^*_d = B00R_d$
trekantslyshet T^*

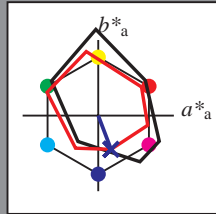

LRS18a; adapterte (a) CIELAB data					
navn	$L^*=L^*_a$	a^*_a	b^*_a	$C^*_{ab,a}$	$h^*_{ab,a}$
R _{d, Ma}	47.5	57.2	37.8	68.6	33
Y _{d, Ma}	91.5	-15.8	84.6	86.1	100
G _{d, Ma}	54.3	-67.6	30.8	74.3	155
C _{d, Ma}	53.1	-30.0	-43.1	52.5	235
B _{d, Ma}	32.5	16.9	-44.6	47.7	290
M _{d, Ma}	48.1	65.4	-12.7	66.6	348
N _{d, Ma}	23.8	0.0	0.0	0.0	0
W _{d, Ma}	95.8	0.0	0.0	0.0	0
R _{d, CIE}	39.9	58.7	27.9	65.0	25
Y _{d, CIE}	81.2	-2.8	71.5	71.6	92
G _{d, CIE}	52.2	-42.4	13.6	44.5	162
B _{d, CIE}	30.5	1.4	-46.4	46.4	271

Data for maksimalfarge (Ma):

$LabCh^*_{d, Ma}$: 32 16 -44 47 290

$HIC^*_{d, Ma}$: B00R_100_100_d



$rgbic^*_{d, Ma}$:

0.0 0.0 1.0 1.0 1.0

trekantslyshet T^*

LRS18a; adapterte (a) CIELAB data					
H^*_d	$L^*=L^*_a$	a^*_a	b^*_a	$C^*_{ab,a}$	$h^*_{ab,a}$
R00Y_100_100 _d	47.5	57.2	37.8	68.6	33
R25Y_100_100 _d	57.4	43.5	54.5	69.7	51
R50Y_100_100 _d	70.5	19.2	66.2	69.0	73
R75Y_100_100 _d	83.5	-2.9	76.8	76.9	92
Y00G_100_100 _d	91.5	-15.8	84.6	86.1	100
Y25G_100_100 _d	90.4	-20.9	86.5	89.0	103
Y50G_100_100 _d	70.9	-41.7	54.8	68.9	127
Y75G_100_100 _d	60.1	-57.9	39.6	70.2	145
G00B_100_100 _d	54.3	-67.6	30.8	74.3	155
G25B_100_100 _d	55.0	-51.4	-8.9	52.2	189
G50B_100_100 _d	53.1	-30.0	-43.1	52.5	235
G75B_100_100 _d	46.1	-13.3	-49.4	51.1	254
B00R_100_100 _d	32.5	16.9	-44.6	47.7	290
B25R_100_100 _d	37.2	43.1	-30.8	53.0	324
B50R_100_100 _d	48.1	65.4	-12.7	66.6	348
B75R_100_100 _d	47.8	58.9	10.4	59.9	10

%Omfang
 $u^*_{rel} = 114$
%Regularitet
 $g^*_{H,rel} = 28$
 $g^*_{C,rel} = 38$

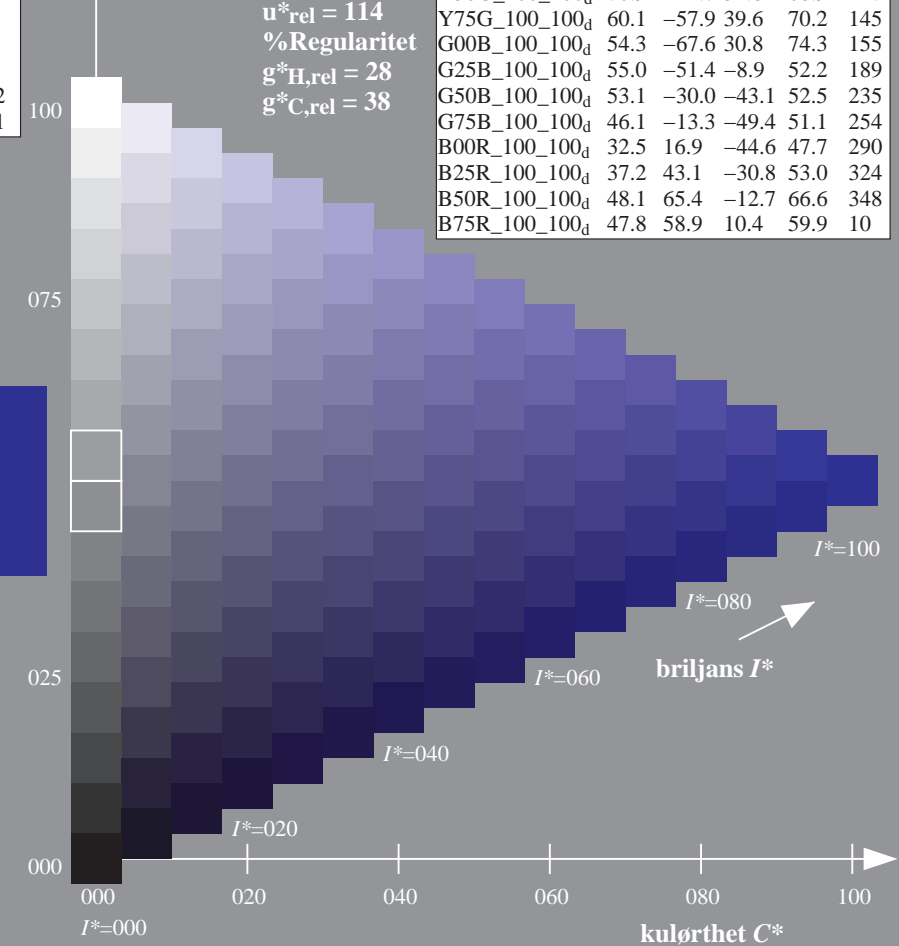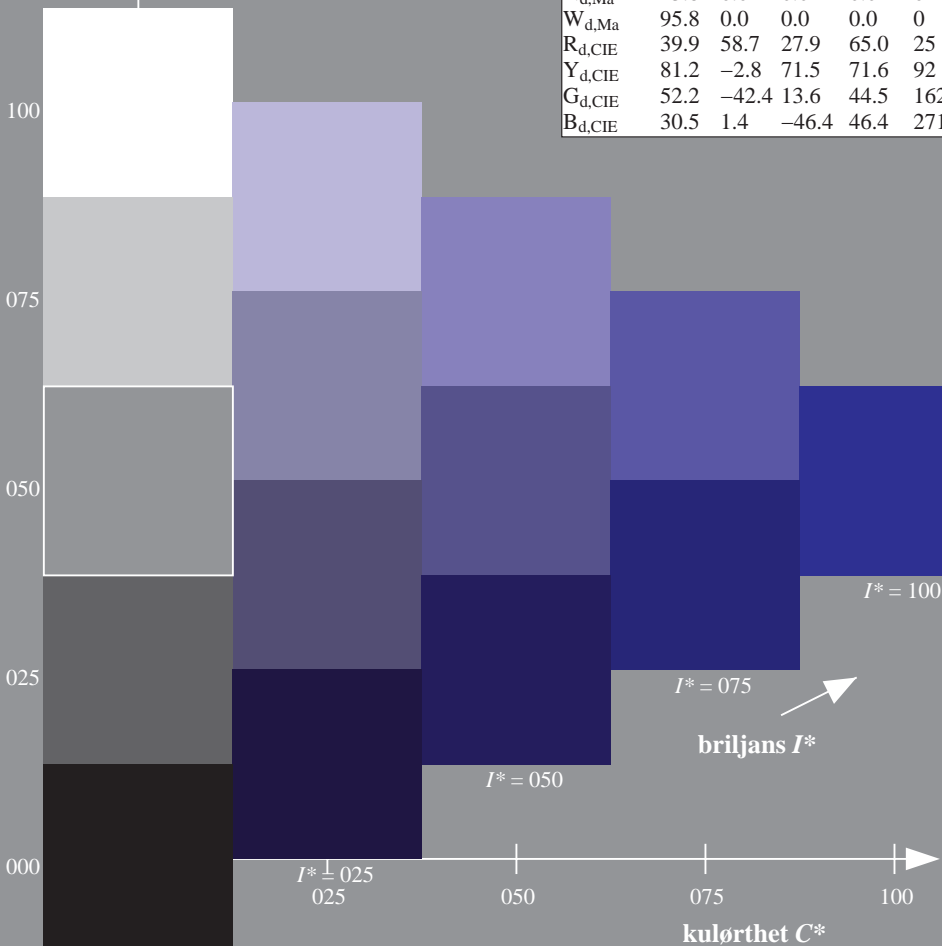

se lignende filer: <http://130.149.60.45/~farbmetrik/RN19/RN19.HTM>
teknisk informasjon: <http://www.ps.bam.de> eller <http://130.149.60.45/~farbmetrik>

TUB registrering: 20150701-RN19/RN19L0NP.PDF / .PS
anvendelse for måling av laserprinter output, separasjon cmykn6 (CMYK)
TUB-material: code=rhadata